


COMPULSORY VALVE OPERATION CHECK MODE

ENGINE (DIAGNOSTICS)

14. Compulsory Valve Operation Check Mode


A: OPERATION

1) Prepare the Subaru Select Monitor kit. <Ref. to EN(H4DOTC)-7, PREPARATION TOOL, General Description.>

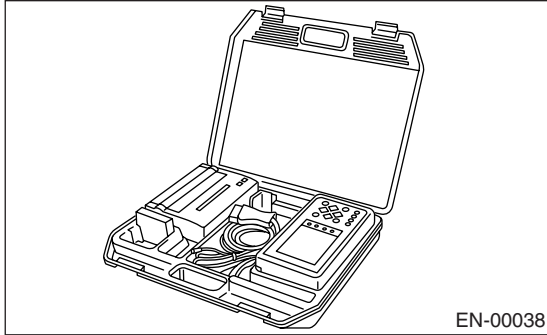


2) Connect the diagnosis cable to Subaru Select Monitor.


3) Insert the cartridge into Subaru Select Monitor. <Ref. to EN(H4DOTC)-7, PREPARATION TOOL, General Description.>

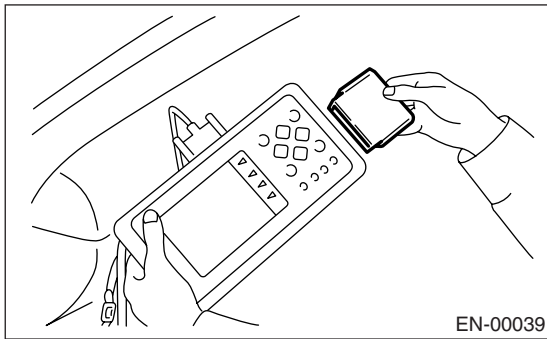

4) Connect the test mode connector (A) at the lower portion of instrument panel (on the driver's side).

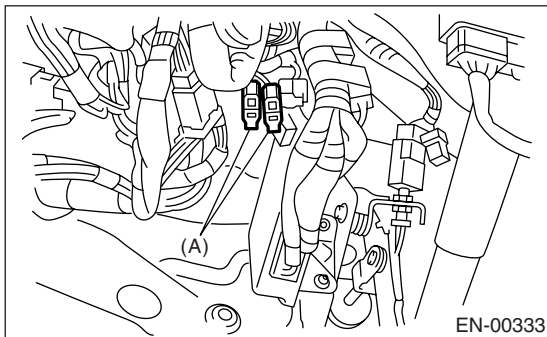


5) Connect the Subaru Select Monitor to data link connector located in the lower portion of instrument panel (on the driver's side).

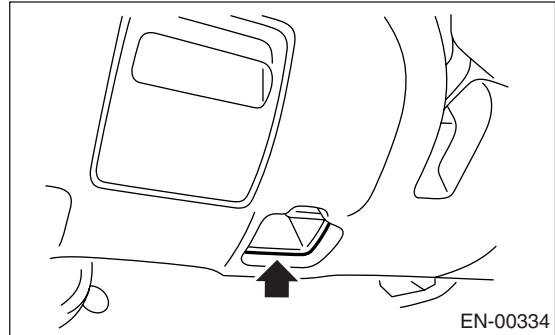

CAUTION:

Do not connect scan tools except for the Subaru Select Monitor and OBD-II general scan tool.

6) Turn the ignition switch to ON (engine OFF) and Subaru Select Monitor switch to ON.

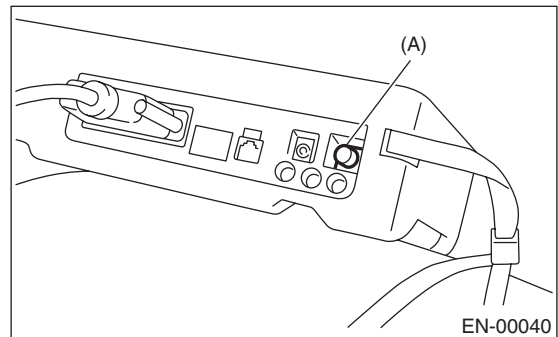

(A) Power switch

7) On the «Main Menu» display screen, select the {2. Each System Check} and press the [YES] key.

8) On the «System Selection Menu» display screen, select the {Engine Control System} and press the [YES] key.

9) Press the [YES] key after the information of engine type is displayed.

10) On the «Engine Diagnosis» display screen, select the {System Operation Check Mode} and press the [YES] key.

11) On the «System Operation Check Mode» display screen, select the {Actuator ON/OFF Operation} and press the [YES] key.

12) Select the desired compulsory actuator on the «Actuator ON/OFF Operation» display screen and press the [YES] key.

13) Pressing the [NO] key completes the compulsory operation check mode. The display will then return to the «Actuator ON/OFF Operation» screen.

COMPULSORY VALVE OPERATION CHECK MODE

ENGINE (DIAGNOSTICS)

- A list of support data is shown in the following table.

| Contents | Display |
|--|---------------------------------|
| Compulsory fuel pump relay operation check | Fuel Pump Relay |
| Compulsory radiator fan relay operation check | Radiator Fan Relay |
| Compulsory air conditioning relay operation check | A/C Compressor Relay |
| Compulsory purge control solenoid valve operation check | CPC Solenoid Valve |
| Compulsory pressure control solenoid valve operation check | PCV Solenoid Valve |
| Compulsory drain valve operation check | Vent. Control Solenoid Valve |
| Compulsory fuel tank sensor control valve operation check | Fuel Tank Sensor Control Valve |
| Compulsory turbocharger wastegate solenoid operation check | Turbocharger Wastegate Solenoid |

NOTE:

- The following parts will be displayed but not functional because they are not installed on the vehicle.

| Display |
|---------------------------------|
| EGR Solenoid Valve |
| ASV Solenoid Valve |
| FICD Solenoid |
| Pressure Switching Sol. 1 |
| Pressure Switching Sol. 2 |
| AAI Solenoid Valve |
| Turbocharger Wastegate Solenoid |

- For detailed operation procedure, refer to the SUBARU SELECT MONITOR OPERATION MANUAL.