

FUEL FILTER

FUEL INJECTION (FUEL SYSTEMS)


27. Fuel Filter

A: REMOVAL

WARNING:

- Place “NO FIRE” signs near the working area.
- Be careful not to spill fuel on the floor.

- 1) Release the fuel pressure. <Ref. to FU(H4DOTC)-46, RELEASING OF FUEL PRESSURE, OPERATION, Fuel.>
- 2) Disconnect the fuel delivery hoses from the fuel filter.

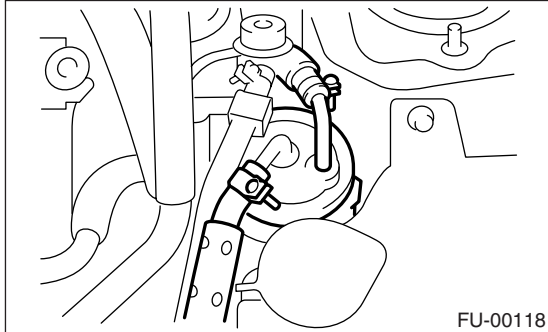

- 3) Remove the filter from the holder.

B: INSTALLATION


CAUTION:

- If fuel hoses are damaged at the connecting portion, replace them with new ones.
- If clamps are badly damaged, replace them with new ones.

- 1) Install in the reverse order of removal.
- 2) Tighten the hose clamp screws.

Tightening torque:

1.25 N·m (0.13 kgf-m, 0.94 ft-lb)

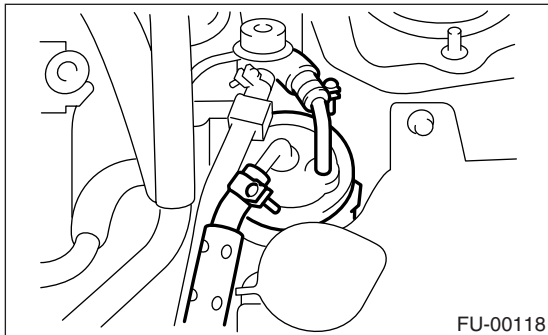

C: INSPECTION

- 1) Check the inside of fuel filter for dirt and water sediment.
- 2) If it is clogged, or if the replacement interval has been reached, replace it.
- 3) If the water is found in it, shake fuel filter and expel the water from the inlet port.
- 4) If fuel hoses are damaged at the connecting portion, replace it with a new one.
- 5) If clamps are badly damaged, replace with new ones.