


7. Air By-pass Valve

A: REMOVAL

1) Disconnect the air by-pass hoses from air by-pass valve.

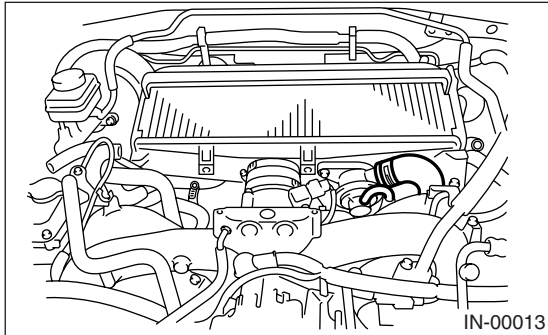

2) Remove the air by-pass valve from intercooler.



B: INSTALLATION

Install in the reverse order of removal.

NOTE:

Install the O-ring in proper position.

Tightening torque:

16 N·m (1.6 kgf·m, 11.6 ft·lb)

