


# ENGINE COOLANT TEMPERATURE SENSOR

FUEL INJECTION (FUEL SYSTEMS)


## 4. Engine Coolant Temperature Sensor

### A: REMOVAL

- 1) Disconnect the ground cable from battery.

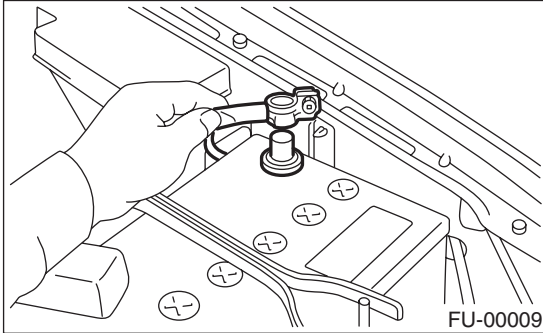

- 2) Remove the air intake duct and air cleaner assembly. <Ref. to IN(H4SO)-7, REMOVAL, Air Intake Duct.> <Ref. to IN(H4SO)-6, REMOVAL, Air Cleaner Case.>
- 3) Disconnect the connector from the engine coolant temperature sensor.

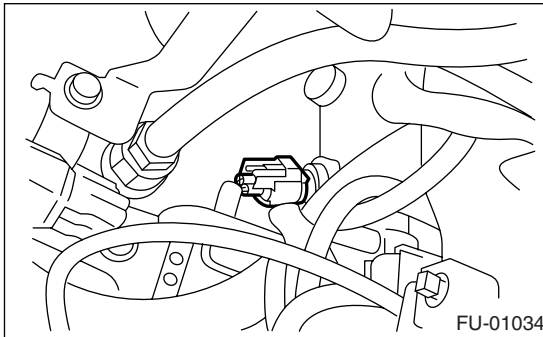

- 4) Remove the engine coolant temperature sensor.

### B: INSTALLATION

Install in the reverse order of removal.

#### *Tightening torque:*

**18 N·m (1.8 kgf-m, 13.0 ft-lb)**

