


MANIFOLD ABSOLUTE PRESSURE SENSOR

FUEL INJECTION (FUEL SYSTEMS)


9. Manifold Absolute Pressure Sensor

A: REMOVAL


1) Disconnect the ground cable from battery.

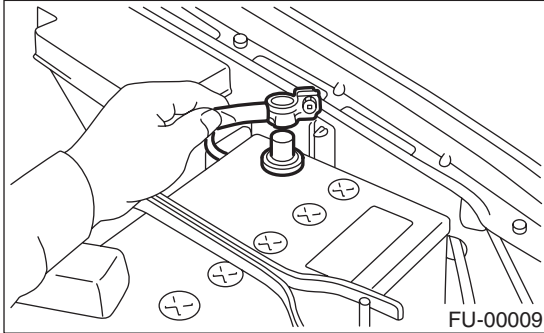

2) Disconnect the connector from the manifold absolute pressure sensor.

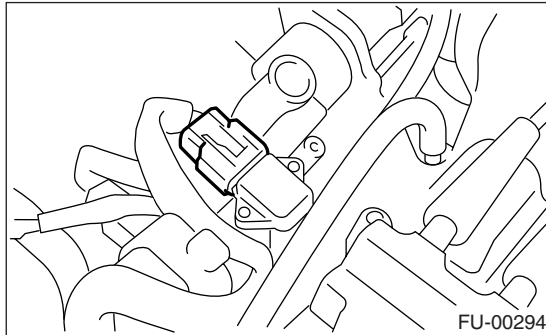

3) Remove the manifold absolute pressure sensor.

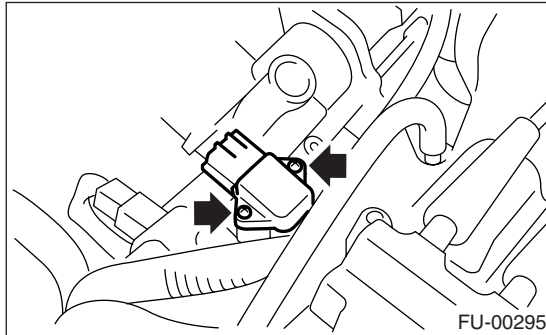


B: INSTALLATION

Install in the reverse order of removal.

Tightening torque:

1.6 N·m (0.16 kgf-m, 1.2 ft-lb)

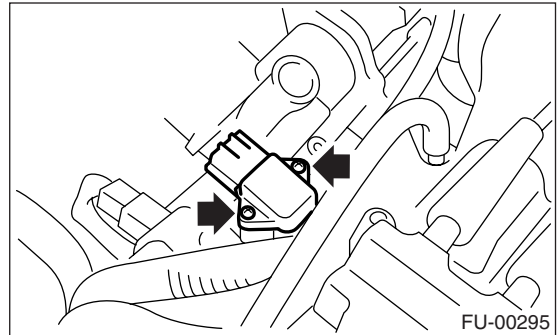

NOTE:

Replace the O-ring with a new one.