


5. Resonator Chamber

A: REMOVAL

- 1) Remove the air intake duct. <Ref. to IN(H4SO)-7, REMOVAL, Air Intake Duct.>
- 2) Remove the resonator chamber.

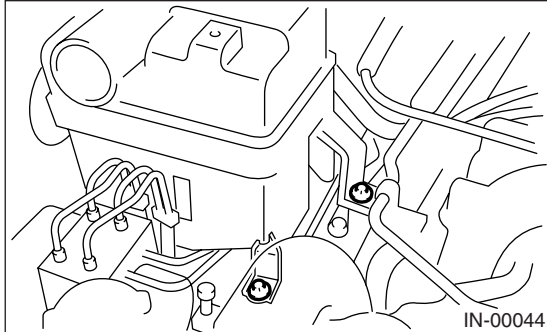

B: INSTALLATION

Install in the reverse order of removal.

NOTE:

For tightening torque, refer to "COMPONENT".
<Ref. to IN(H4SO)-2, COMPONENT, General Description.>

C: INSPECTION

- 1) Inspect for cracks and loose connections.
- 2) Inspect that no foreign objects are mixed in the resonator chamber.