

# CENTER DIFFERENTIAL

## MANUAL TRANSMISSION AND DIFFERENTIAL

### 13.Center Differential

#### A: REMOVAL

- 1) Remove the manual transmission assembly from vehicle. <Ref. to 5MT-28, REMOVAL, Manual Transmission Assembly.>
- 2) Remove the transfer case with extension case assembly. <Ref. to 5MT-42, REMOVAL, Transfer Case and Extension Case Assembly.>
- 3) Remove the extension case assembly. <Ref. to 5MT-42, REMOVAL, Transfer Case and Extension Case Assembly.>
- 4) Remove the transfer driven gear. <Ref. to 5MT-48, REMOVAL, Transfer Driven Gear.>
- 5) Remove the center differential.

#### B: INSTALLATION

- 1) Install the center differential into transfer case.
- 2) Install the transfer driven gear. <Ref. to 5MT-48, INSTALLATION, Transfer Driven Gear.>
- 3) Install the extension case assembly. <Ref. to 5MT-42, INSTALLATION, Transfer Case and Extension Case Assembly.>
- 4) Install the transfer case with extension case assembly. <Ref. to 5MT-42, REMOVAL, Transfer Case and Extension Case Assembly.>
- 5) Install the back-up light switch and neutral position switch. <Ref. to 5MT-38, REMOVAL, Switches and Harness.>
- 6) Install the manual transmission assembly to vehicle. <Ref. to 5MT-31, INSTALLATION, Manual Transmission Assembly.>


#### C: DISASSEMBLY

- 1) Remove the ball bearing using ST.

#### NOTE:

Do not reuse the ball bearing.

ST 498077300 CENTER DIFFERENTIAL BEARING REMOVER

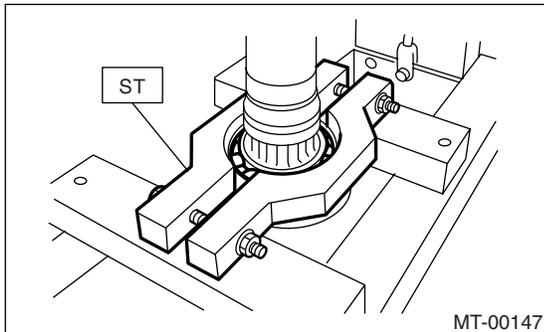


- 2) Do not disassemble the center differential except ball bearing part because it is a non-disassemblable part.

#### D: ASSEMBLY

Install the ball bearing to center differential assembly.

#### NOTE:

Do not apply pressure in excess of 10 kN (1 ton, 1.1 US ton, 1.0 Imp ton).

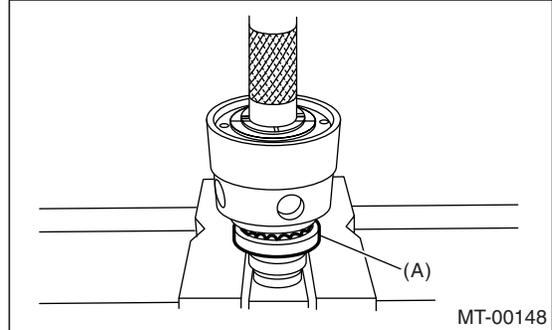

(A) Ball bearing

#### E: INSPECTION

- 1) Bearings

Replace the bearings in the following cases:

- Broken or rusty bearings
- Worn or damaged
- Bearings that fail to turn smoothly or make noise when turned after gear oil lubrication.
- Bearings having other defects

- 2) Center differential

Replace the center differential assembly in the following case:

- Worn or damaged