

DIFFERENTIAL SIDE RETAINER OIL SEAL

MANUAL TRANSMISSION AND DIFFERENTIAL


6. Differential Side Retainer Oil Seal

A: INSPECTION

Check the differential side retainer oil seal for leakage of gear oil. If oil leaks, replace the oil seal.

B: REPLACEMENT

- 1) Lift-up the vehicle.
- 2) Remove the front exhaust pipe and center exhaust pipe. (Non-turbo model) <Ref. to EX(H4SO)-4, REMOVAL, Front Exhaust Pipe.>
- 3) Drain the gear oil from oil drain plug.

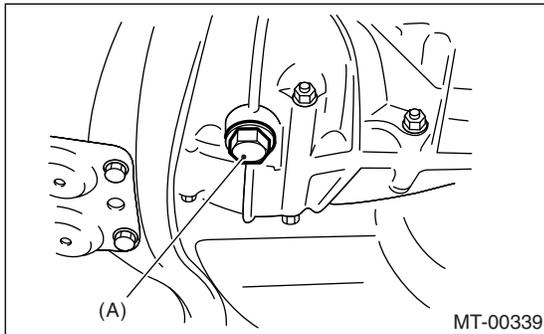


(A) Drain plug

- 4) Replace the gasket with new one, and then tighten the differential oil drain plug.

Tightening torque:

44 N·m (4.5 kgf·m, 32.5 ft·lb)

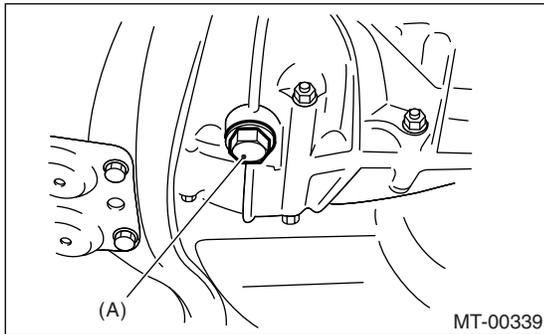


(A) Drain plug

- 5) Separate the front drive shaft from transmission. <Ref. to DS-33, REMOVAL, Front Drive Shaft.>
- 6) Using a vinyl tape, etc. wrapped flat tip screwdriver, remove the differential side retainer oil seal.

- 7) Using the ST, install the differential side retainer oil seal tapping ST lightly with a hammer.
ST 18675AA000 DIFFERENTIAL OIL SEAL INSTALLER

NOTE:

Be sure to apply oil to oil seal lip surface.

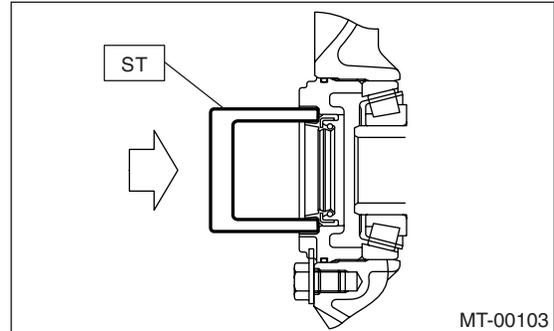

- 8) Install the front drive shaft. <Ref. to DS-34, INSTALLATION, Front Drive Shaft.>
- 9) Install the front exhaust pipe and center exhaust pipe. (Non-turbo model) <Ref. to EX(H4SO)-5, INSTALLATION, Front Exhaust Pipe.>
- 10) Lower the vehicle.
- 11) Fill gear oil into the gauge hole. <Ref. to 5MT-27, REPLACEMENT, Transmission Gear Oil.>