

OIL SEAL

MANUAL TRANSMISSION AND DIFFERENTIAL

5. Oil Seal

A: INSPECTION


Check the oil seal portion for leakage. If leakage is found, replace the oil seal with a new one.

B: REPLACEMENT


- 1) Clean the transmission exterior.
- 2) Drain the gear oil completely.
- 3) Replace the gasket with a new one, and then tighten the drain plug after draining gear oil.

Tightening torque:

44 N·m (4.5 kgf·m, 32.5 ft·lb)

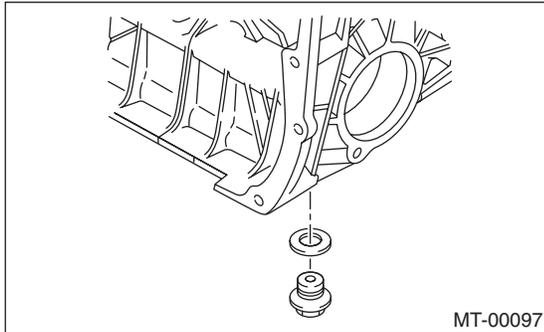


- 4) Remove the rear exhaust pipe and muffler.
- 5) Remove the heat shield cover.
- 6) Remove the propeller shaft. <Ref. to DS-15, REMOVAL, Propeller Shaft.>
- 7) Using the ST, remove the oil seal.
ST 398527700 PULLER ASSY

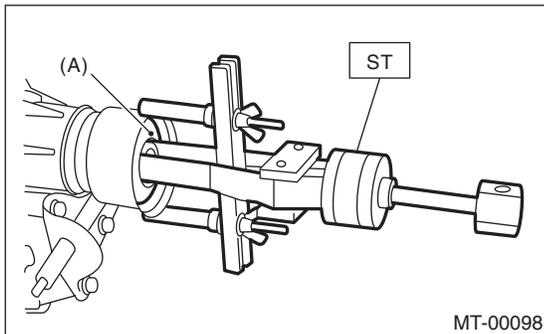

(A) Oil seal

- 8) Using the ST, install the oil seal.
ST 498057300 INSTALLER

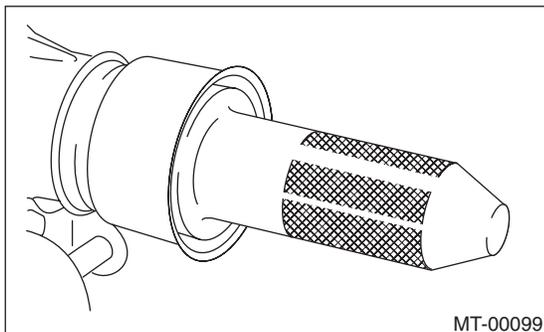

9) Install the propeller shaft. <Ref. to DS-16, INSTALLATION, Propeller Shaft.>

10) Install the heat shield cover.

11) Install the rear exhaust pipe and muffler.

12) Pour gear oil and check the oil level. <Ref. to 5MT-27, REPLACEMENT, Transmission Gear Oil.>