


## 5. Rear ABS Wheel Speed Sensor

### A: REMOVAL

- 1) Disconnect the ground cable from battery.
- 2) Lift-up the vehicle.
- 3) Remove the rear seat and disconnect the rear ABS wheel speed sensor connector.
- 4) Remove the rear sensor harness bracket from the rear trailing link and bracket.
- 5) Remove the rear ABS wheel speed sensor from back plate.

#### CAUTION:

- Be careful not to damage the pole piece located at tip of the sensor and teeth faces during removal.
- Do not pull the sensor harness during removal.

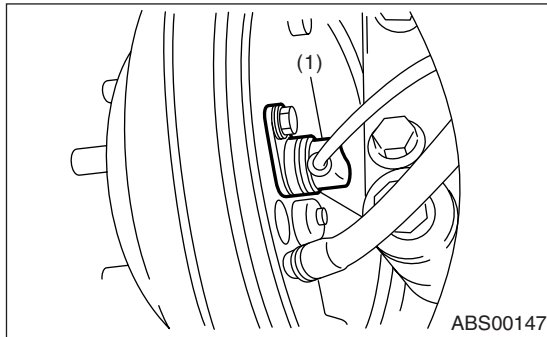

(1) Rear ABS wheel speed sensor


- 6) Remove the rear tone wheel while removing the hub from housing and hub assembly. <Ref. to -25, REMOVAL, Rear Axle.>

### B: INSTALLATION

- 1) Install the rear tone wheel on hub, then rear housing. <Ref. to -31, ASSEMBLY, Rear Axle.>
- 2) Temporarily install the rear ABS wheel speed sensor on back plate.

#### CAUTION:

Be careful not to strike the ABS wheel speed sensor's pole piece against tone wheel and adjacent metal parts during installation.

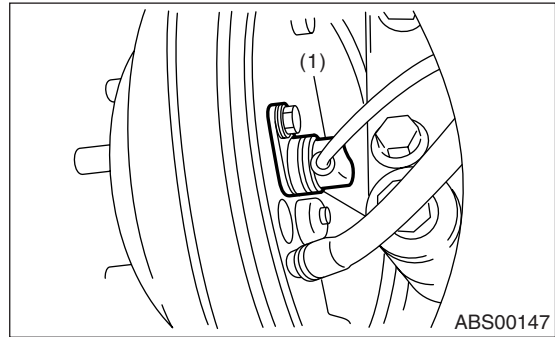


(1) Rear ABS wheel speed sensor

- 3) Install the rear drive shaft to rear housing and rear differential spindle. <Ref. to -28, INSTALLATION, Rear Axle.>
- 4) Install the rear sensor harness on rear trailing link.

#### Tightening torque:

**33 N·m (3.4 kgf·m, 24.6 ft·lb)**

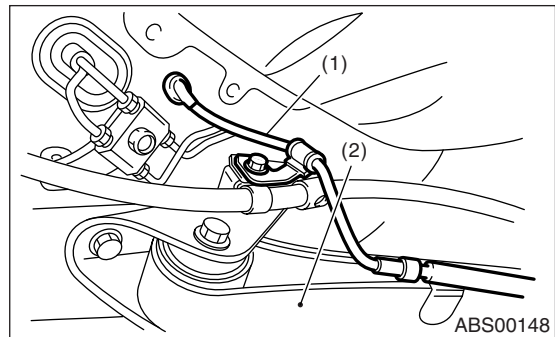

(1) Rear sensor harness

(2) Trailing link

- 5) Check the ABS wheel speed sensor gap. <Ref. to ABS-18, SENSOR GAP, INSPECTION, Rear ABS Wheel Speed Sensor.> After standard clearance is obtained, tighten the ABS wheel speed sensor on back plate to specified torque.

If the clearance is outside specification, readjust using spacer (Part No. 26755AA000).

#### ABS wheel speed sensor standard clearance:

**0.7 — 1.2 mm (0.028 — 0.047 in)**

#### Tightening torque:

**33 N·m (3.4 kgf·m, 24.6 ft·lb)**

#### NOTE:

Check the marks on the harness and make sure that no kink exists. (RH: white, LH: yellow)

# REAR ABS WHEEL SPEED SENSOR

## ABS


- 6) After confirmation of the ABS wheel speed sensor clearance, connect the connector to ABS wheel speed sensor.
- 7) Connect the battery ground cable to battery.

### C: INSPECTION

#### 1. ABS WHEEL SPEED SENSOR

- 1) Check the pole piece of ABS wheel speed sensor for foreign particles or damage. If necessary, clean the pole piece or replace ABS wheel speed sensor.
- 2) Measure the ABS wheel speed sensor resistance.

If resistance is outside the standard value, replace the ABS wheel speed sensor with a new one.

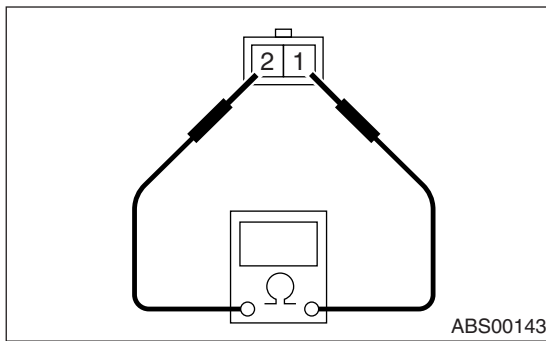

Terminal No.	Standard
1 and 2	1.15±0.115 kΩ

#### NOTE:

Check the ABS wheel speed sensor cable for discontinuity. If necessary, replace with a new one.

#### 2. SENSOR GAP


Measure clearance between tone wheel and ABS wheel speed sensor at whole periphery.

#### NOTE:

If clearance is narrow, adjust by using spacer (Part No. 26755AA000).

If clearance is wide, check the outputted voltage then replace the ABS wheel speed sensor or tone wheel if the outputted voltage is outside specification.

**ABS wheel speed sensor clearance:**  
**0.7 — 1.2 mm (0.028 — 0.047 in)**

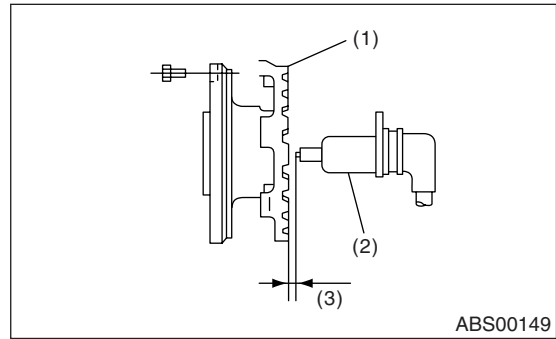

- (1) Tone wheel
- (2) ABS wheel speed sensor
- (3) Sensor gap

### 3. OUTPUT VOLTAGE


Output voltage can be checked by the following method. Install the resistor and condenser, then rotate the wheel about 2.75 km/h (2 MPH) or equivalent.

**Output voltage specification:**

**0.12 — 1 V (at 20 Hz)**

**NOTE:**

Regarding terminal No., please refer to item 1. ABS WHEEL SPEED SENSOR. <Ref. to ABS-18, ABS WHEEL SPEED SENSOR, INSPECTION, Rear ABS Wheel Speed Sensor.>

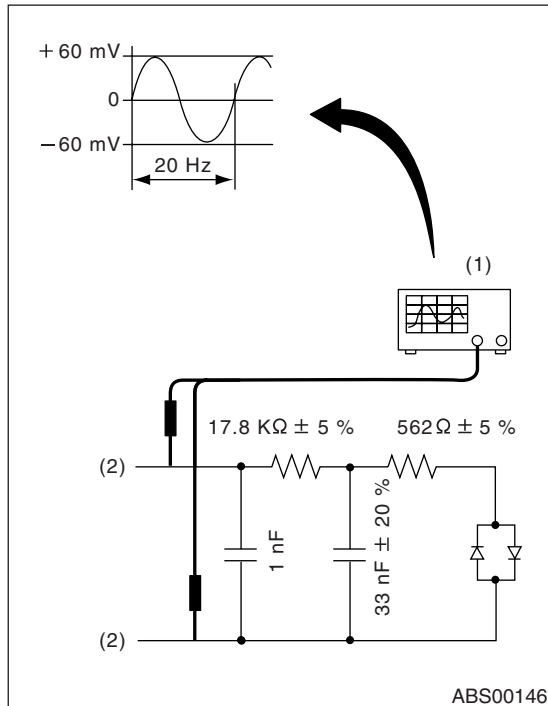

- (1) Oscilloscope
- (2) Terminal

### D: ADJUSTMENT

Adjust the gap using spacer (Part No. 26755AA000).