


7. Front Crossmember


A: REMOVAL

- 1) Disconnect the ground cable from battery.
- 2) Lift-up the vehicle, and then remove the front wheels.
- 3) Remove the sub frame.
- 4) Remove both the stabilizer and jack-up plate.

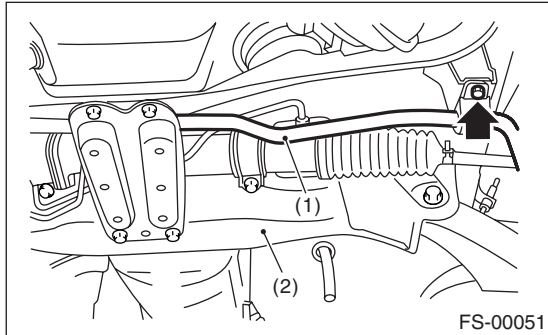

- (1) Front stabilizer
- (2) Front crossmember

- 5) Disconnect the tie-rod end from housing.
- 6) Remove the front exhaust pipe.
- 7) Remove the front transverse link from front crossmember and body.

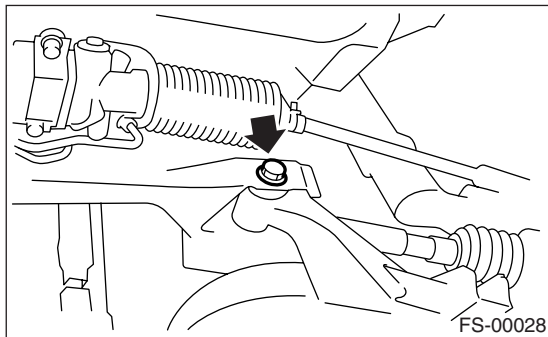

- 8) Remove the bolts attaching engine mount cushion rubber to crossmember.
- 9) Remove the steering universal joint.
- 10) Disconnect the power steering pipe from steering gear box.
- 11) Lift the engine by approx. 10 mm (0.39 in) by using chain block.
- 12) Support the crossmember with a jack, remove nuts securing crossmember to body and lower the crossmember gradually along with steering gear-box.

CAUTION:

When removing the crossmember downward, be careful that tie-rod end does not interfere with SFJ boot.

B: INSTALLATION

- 1) Install in the reverse order of removal.

CAUTION:

Always tighten the rubber bushing when tires are in full contact with the ground and vehicle is curb weight.

Tightening torque:

Transverse link bushing to crossmember:

125 N·m (12.7 kgf-m, 92.3 ft-lb)

Stabilizer to bushing:

25 N·m (2.5 kgf-m, 18.1 ft-lb)

Tie-rod end to housing:

27.0 N·m (2.75 kgf-m, 19.9 ft-lb)

Front cushion rubber to crossmember:

85 N·m (8.7 kgf-m, 62.7 ft-lb)

Universal joint to pinion shaft:

24 N·m (2.4 kgf-m, 17.4 ft-lb)

Crossmember to body:

100 N·m (10.2 kgf-m, 74 ft-lb)

- 2) Purge air from the power steering system.

<Ref. to PS-52, Power Steering Fluid.>

NOTE:

Check the wheel alignment and adjust if necessary.

C: INSPECTION

Check the crossmember for wear, damage and cracks, and correct or replace if defective.