


## 8. Side Airbag Sensor

### A: REMOVAL

- 1) Turn the ignition switch to OFF.
- 2) Disconnect the ground cable from battery, and wait for at least 20 seconds before starting work.
- 3) Remove the outer belt (FRONT). <Ref. to SB-7, FRONT OUTER BELT, REMOVAL, Front Seat Belt.>
- 4) Detach the side airbag sensor, and then disconnect the airbag connector.

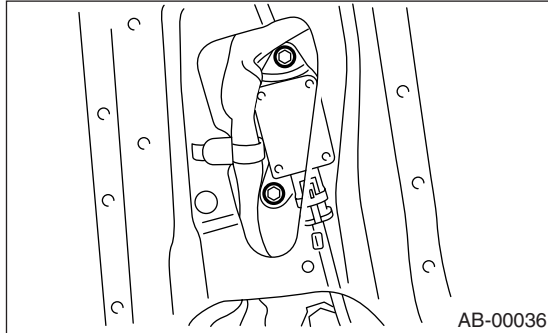

### B: INSTALLATION

#### CAUTION:

Use new TORX® bolts T30 when reassembling.

Install in the reverse order of removal.

#### Tightening torque:

Refer to “COMPONENT” in “General Description” <Ref. to AB-2, SRS AIRBAG, COMPONENT, General Description.>

### C: INSPECTION

Check for the following, and replace damaged parts with new parts.

- Bracket connector for side airbag sensor is damaged.
- Side airbag is deployed.