

### **3. Cruise Control Module**


#### **A: NOTE**

Engine Control Module (ECM) controls cruise control system (Turbo model).

#### **B: REMOVAL**

##### **1. NON-TURBO MODEL**

- 1) Disconnect the ground cable from battery.
- 2) Remove the glove box. <Ref. to EI-34, REMOVAL, Glove Box.>
- 3) Disconnect the connector from cruise control module.
- 4) Remove the bolt, then detach the cruise control module (A).

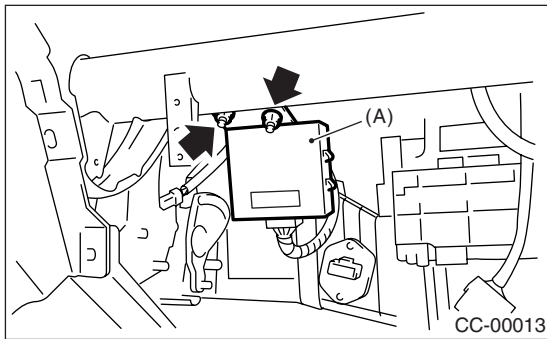

##### **2. TURBO MODEL**

<Ref. to FU(H4DOTC)-42, REMOVAL, Engine Control Module (ECM).>

#### **C: INSTALLATION**

##### **1. NON-TURBO MODEL**

Install in the reverse order of removal.

#### **NOTE:**

Attach the part number label, facing the rear side of the vehicle.

##### **2. TURBO MODEL**

<Ref. to FU(H4DOTC)-42, INSTALLATION, Engine Control Module (ECM).>