

# STOP AND BRAKE SWITCH

CRUISE CONTROL SYSTEM

## 6. Stop and Brake Switch

### A: REMOVAL


- 1) Disconnect the ground cable from battery.
- 2) Disconnect the connector from stop and brake switch, and then remove the switch. <Ref. to BR-49, REMOVAL, Stop Light Switch.>

### B: INSTALLATION

Install in the reverse order of removal.

### C: INSPECTION

Measure the brake switch (A) and stop light switch (B) resistance.

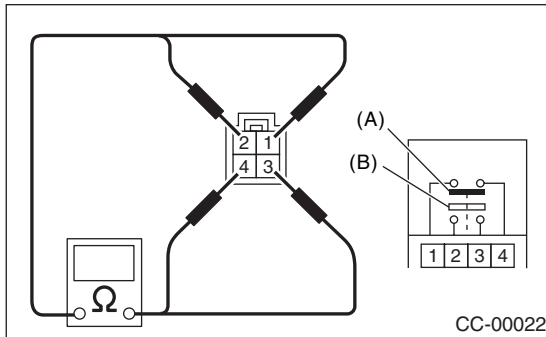

Switch	Pedal	Terminal No.	Standard
Brake	Released	1 and 4	Less than 1 $\Omega$
	Depressed	1 and 4	More than 1 M $\Omega$
Stop light	Released	2 and 3	More than 1 M $\Omega$
	Depressed	2 and 3	Less than 1 $\Omega$

If NG, replace the stop and brake switch.