



2. Front Hood Panel

A: REMOVAL


- 1) Open the front hood to remove washer nozzles.
- 2) Release the clips to remove front hood insulator.

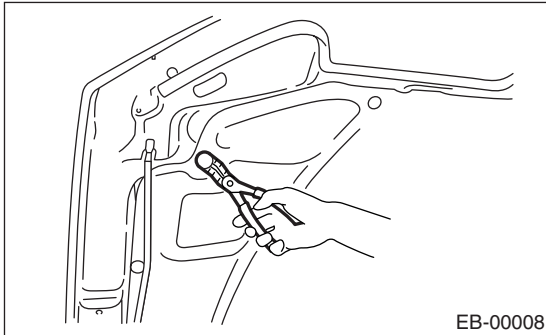

- 3) Remove the bolts to remove front hood from hinges.

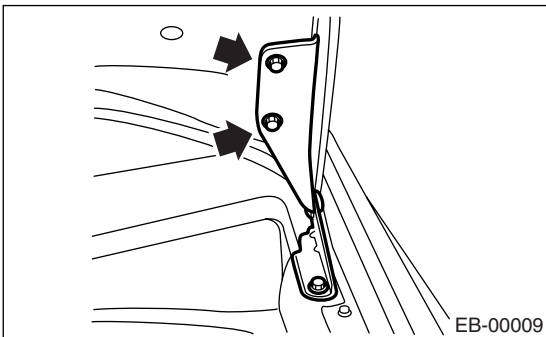

- 3) Rotate the hood buffer to adjust lateral height.

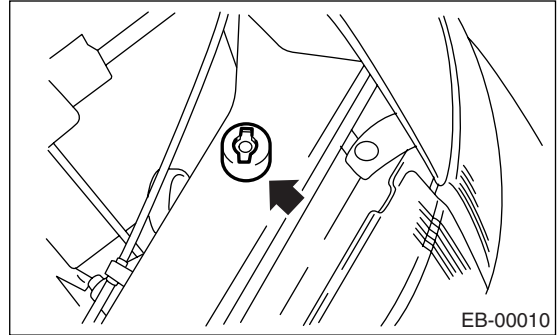

B: INSTALLATION


- 1) Install in the reverse order of removal.
- 2) Adjust the clearance between front hood panel and front fender panel. Clearance must be equal at both sides.

Tightening torque:

24.5 N·m (2.5 kgf·m, 18.1 ft·lb)

C: ADJUSTMENT

- 1) Use the hinge mounting holes to align the front hood longitudinally and laterally.

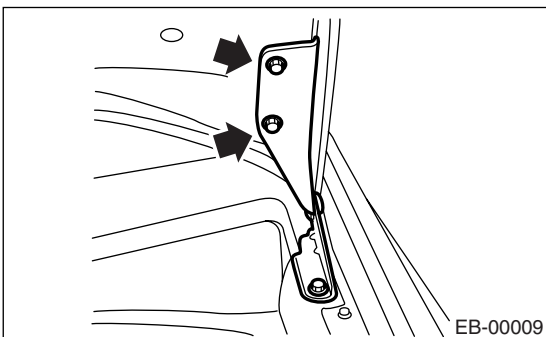

- 2) Adjust the height at front end of hood. <Ref. to SL-38, ADJUSTMENT, Front Hood Lock Assembly.>