


## 12. Glove Box

### A: REMOVAL

- 1) Open the glove box.
- 2) Loosen the screws to remove glove box.

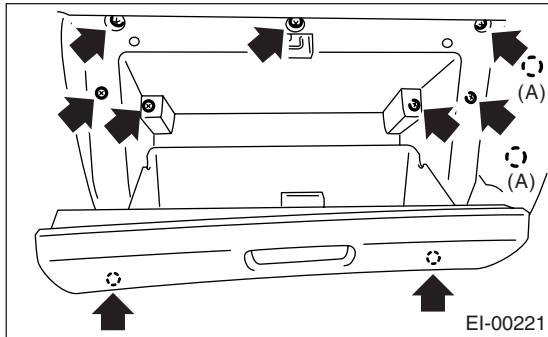

(A) Clip

### B: INSTALLATION

Install in the reverse order of removal.