


13.Roof Rail

A: REMOVAL

- 1) Remove the roof trim. <Ref. to EI-44, REMOVAL, Roof Trim.>
- 2) Remove the five mounting nuts.
- 3) Detach the clip at front edge sideways carefully to remove the roof rail upwards.

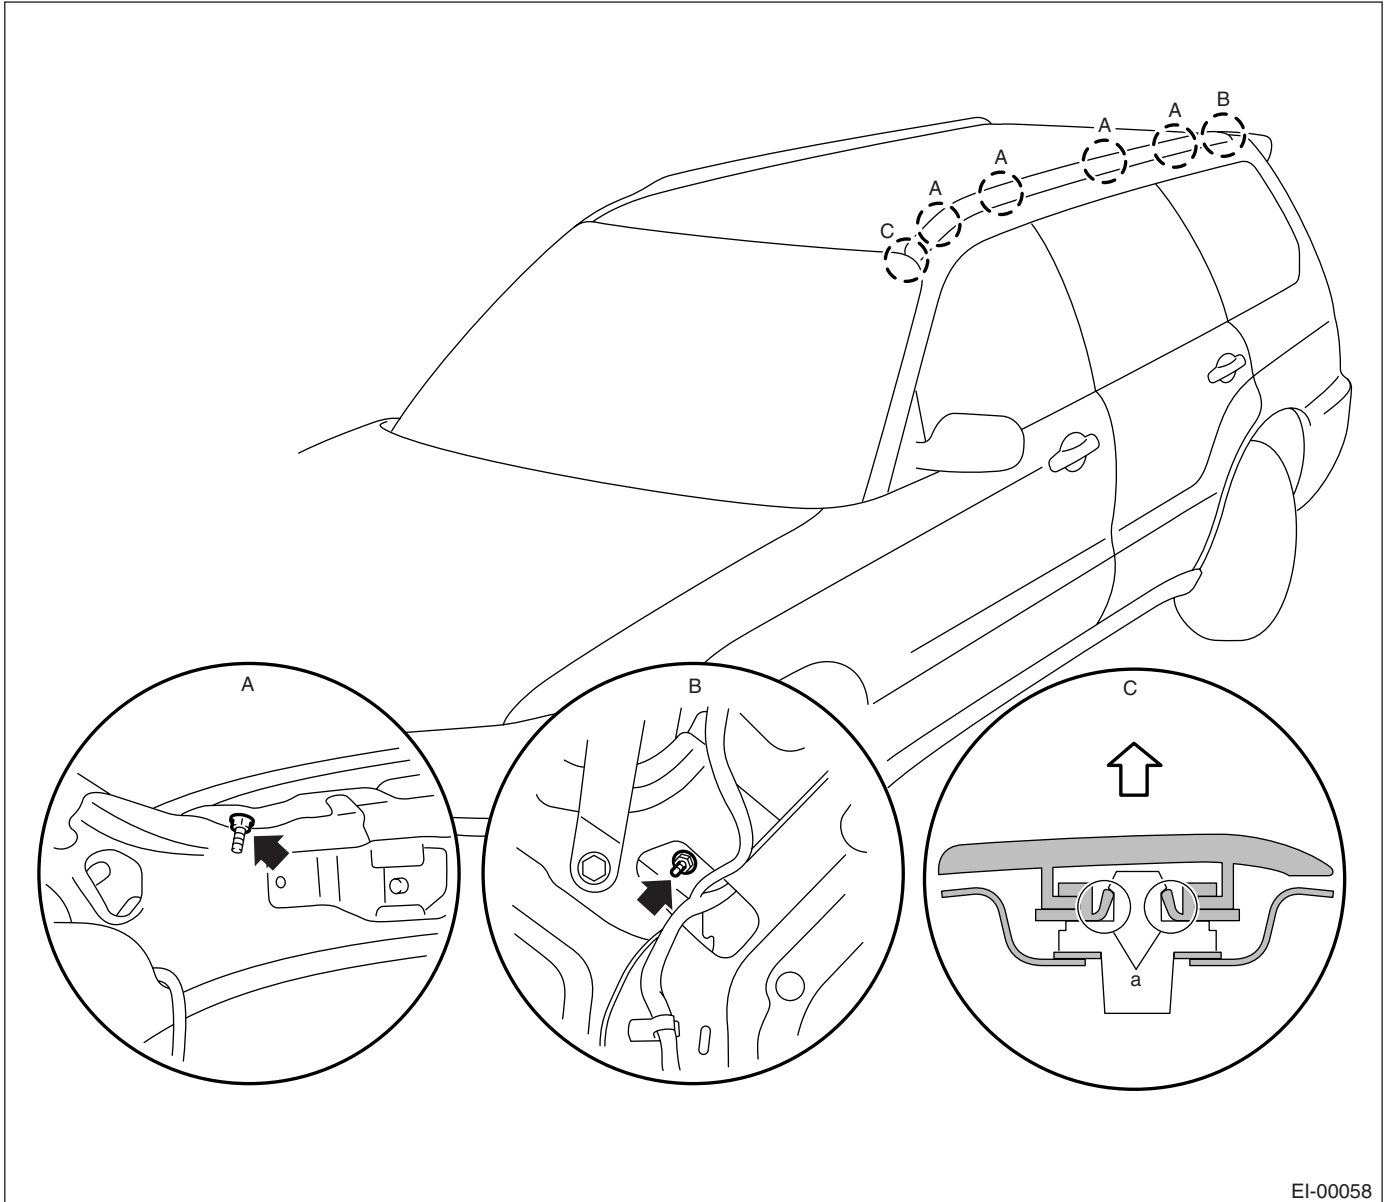

EI-00058

NOTE:

Remove the clip at “C” area upwards while applying sideway force to deflect hook at “a” area.

B: INSTALLATION

Install in the reverse order of removal.

CAUTION:

Be careful not to scratch the body panels with roof rail stud bolts when removing and installing them.

Tightening torque:

7.5 N·m (0.76 kgf·m, 5.53 ft·lb)