


16.Upper Inner Trim

A: REMOVAL

- 1) Remove the lower inner trim. <Ref. to EI-41, RE-MOVAL, Lower Inner Trim.>
- 2) Remove the front molding (A).
- 3) Remove the front pillar upper trim (B).
- 4) Detach the front seat belt shoulder anchor, then remove the center pillar upper trim (C).

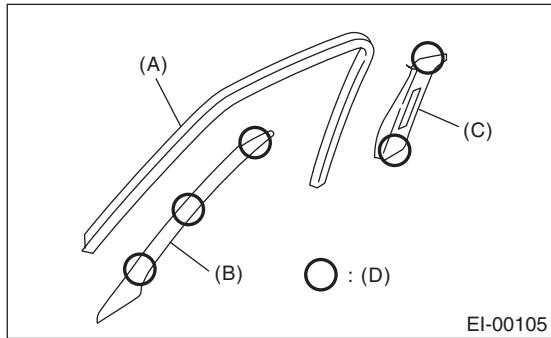

(D) Clip

B: INSTALLATION


Install in the reverse order of removal.

CAUTION:

Be sure to securely hook pawls of inner trim panel to body flange.

NOTE:

When installing the center pillar upper trim and front pillar upper trim, be sure to set the front molding as shown in the figure.

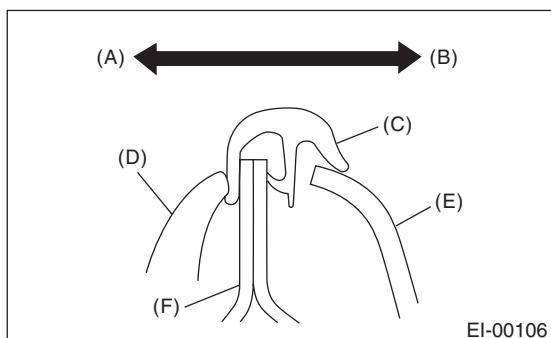

- (A) Outside
- (B) Inside
- (C) Molding
- (D) Weatherstrip
- (E) Trim
- (F) Body