

# FRONT ACCESSORY POWER SUPPLY SOCKET


ENTERTAINMENT

---

## 11. Front Accessory Power Supply Socket

### A: REMOVAL

- 1) Disconnect the ground cable from battery.
- 2) Remove the front cover. <Ref. to EI-36, REMOVAL, Console Box.>
- 3) Disconnect the harness connectors and remove cigarette lighter.

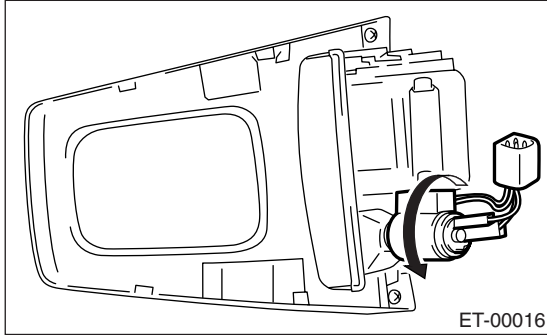

### B: INSTALLATION

Install in the reverse order of removal.