


AMBIENT SENSOR (AUTO A/C MODEL)

HVAC SYSTEM (HEATER, VENTILATOR AND A/C)

19. Ambient Sensor (Auto A/C Model)

A: REMOVAL

- 1) Open the front hood.
- 2) Disconnect the ground cable from battery.
- 3) Disconnect the ambient sensor connector.
- 4) Remove the ambient sensor from radiator lower panel.

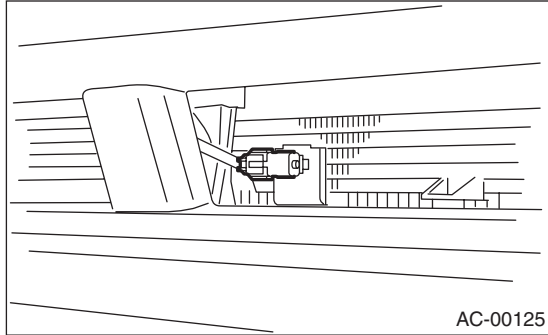

B: INSTALLATION

Install in the reverse order of removal.

C: INSPECTION

<Ref. to AC-30, AMBIENT SENSOR, Diagnostic Procedure for Sensors.>