


CONTROL UNIT

HVAC SYSTEM (HEATER, VENTILATOR AND A/C)

10. Control Unit

A: REMOVAL

- 1) Disconnect the ground cable from battery.
- 2) In case of manual A/C, remove the mode cable and air-mix cable from links of heater unit.
- 3) Remove the console front cover.

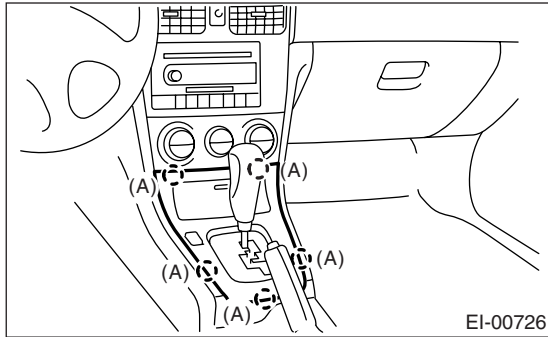


(A) Hook


- 4) Apply the thick protective tape (A) to instrument panel pad to protect the surface of it.

NOTE:

Also apply the protective tape to the deep inside portion between center console panel and instrument panel pad.

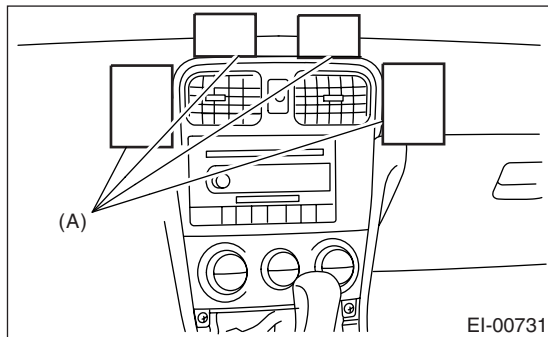

- 5) Loosen the screws.

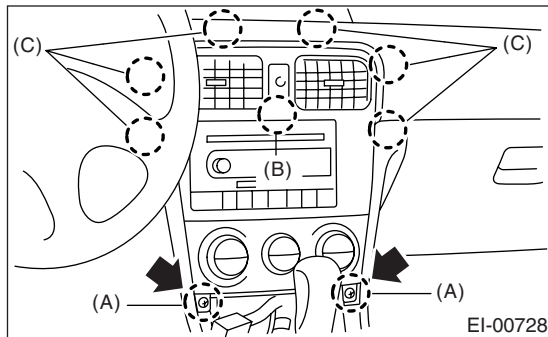


- (A) Screw
- (B) Clip
- (C) Claw

- 6) Insert the flat tip screwdriver to the position (A) and release the claw with pulling out the lower portion of center console panel.

CAUTION:

Do not insert the flat tip screwdriver into any portion except for indicated in the figure. The instrument panel may be damaged.

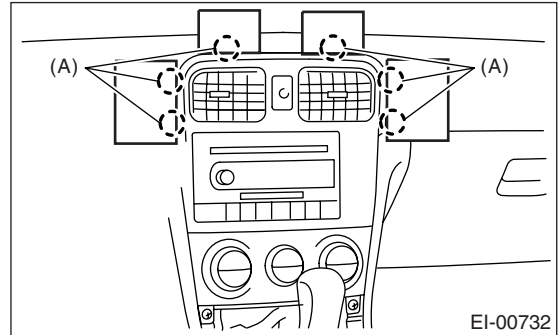

(A) Inserting position of flat tip screwdriver

- 7) Loosen the screws on rear side of center console panel, and then remove the control unit.

B: INSTALLATION

Install in the reverse order of removal.