

# GENERAL DESCRIPTION

INSTRUMENTATION/DRIVER INFO

## 1. General Description

### A: SPECIFICATIONS

Combination meter	Speedometer	Electric pulse type
	Temperature gauge	Cross coil type
	Fuel gauge	Cross coil type
	Tachometer	Electric pulse type
	Turn signal indicator light	14 V — 2 W
	Charge indicator light	14 V — 1.4 W
	Oil pressure indicator light	LED
	ABS warning light	14 V — 1.4 W
	Malfunction indicator light	LED
	HI-beam indicator light	14 V — 2 W
	Door open warning light	LED
	Seat belt warning light	LED
	Brake fluid and parking brake warning light	14 V — 2 W
	FWD indicator light	LED
	AIRBAG warning light	LED
	Meter illumination light	14 V — 3.4 W, 14 V — 2 W
	AT OIL TEMP. warning light	LED
	Cruise indicator light	14 V — 1.4 W
	Low fuel warning light	LED
	Security indicator light	LED
AT select lever position indicator light	14 V — 100 mA	
LCD back light	14 V — 1.4 W	

### B: CAUTION

- Be careful not to damage meters and instrument panel.
- Be careful not to damage meter glasses.
- Make sure that electrical connector is connected securely.
- After installation, make sure that each meter operates normally.
- Use gloves to avoid damage and getting fingerprints on the glass surface and meter surfaces.
- Do not apply excessive force to the printed circuit.
- Do not drop or otherwise apply impact.

### C: PREPARATION TOOL

#### 1. GENERAL TOOLS

TOOL NAME	REMARKS
Circuit Tester	Used for measuring resistance and voltage.