



## 22. Spot Map Light

### A: REMOVAL

- 1) Disconnect the ground cable from battery.
- 2) Insert a flat tip screwdriver to slot of lens, and then pry the lens to remove.

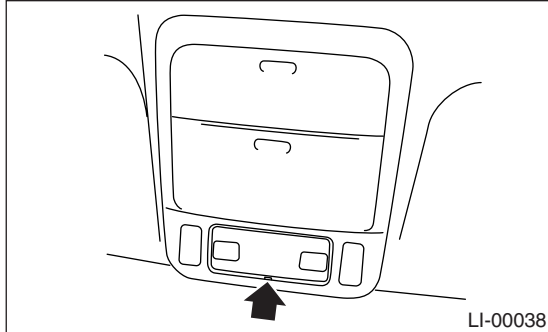

- 3) Remove the spot map light installation screws.

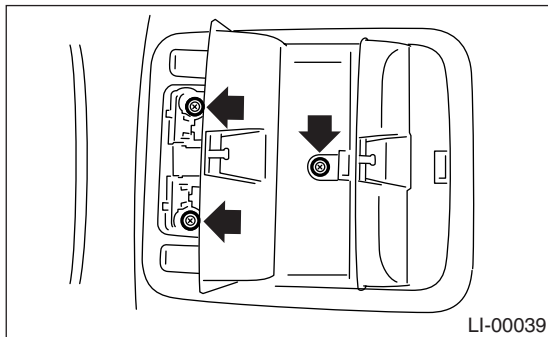

- 4) Disconnect the harness connectors and remove the spot map light.

### B: INSTALLATION

Install in the reverse order of removal.

### C: INSPECTION

#### 1. SPOT MAP LIGHT BULB

- 1) Visually check the bulb for blow out.
- 2) Check the bulb specification. <Ref. to LI-2, SPECIFICATIONS, General Description.>
- 3) If NG, replace the bulb with a new one.

#### 2. SPOT MAP LIGHT SWITCH

Measure the spot map light switch resistance.

Switch position	Terminal No.	Standard
OFF	—	More than 1 MΩ
ON	1 and 2	18 ± 5.4 Ω