


## 5. Front Inner Remote

### A: REMOVAL

- 1) Remove the door trim. <Ref. to EI-32, REMOVAL, Front Door Trim.>
- 2) Remove the sealing cover. <Ref. to EB-13, REMOVAL, Front Sealing Cover.>
- 3) Remove a screw and two cables.
- 4) Remove the front inner remote.

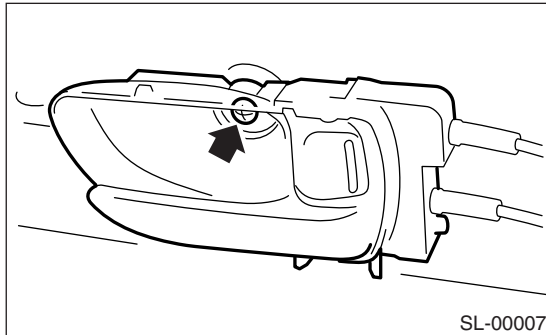

### B: INSTALLATION

Install in the reverse order of removal.

#### NOTE:

Make sure the inner remote works properly after installation.

### C: INSPECTION

- 1) Make sure the cable is not deformed.
- 2) Make sure the lever and cable work smoothly.

#### NOTE:

If the remote handle is metalclad type, make sure that grease is sufficiently applied to the cable connection portion.

If the grease is insufficient, apply additional grease to the cable connection portion before connecting the cable.