

FRONT OUTER HANDLE

SECURITY AND LOCKS

6. Front Outer Handle

A: REMOVAL

1) Remove the door trim. <Ref. to EI-32, REMOVAL, Front Door Trim.>

CAUTION:

Do not use excessive force to remove the door panel. This will deform it.

2) Remove the sealing cover. <Ref. to EB-13, REMOVAL, Front Sealing Cover.>

3) Remove the front inner remote. <Ref. to SL-27, REMOVAL, Front Inner Remote.>

4) Disconnect the cable from cable holder to make cable moving freely.

5) Remove two bolts and rod clamp, and then remove the front outer handle.

NOTE:

The rear bolt can be removed from service hole (A) of inner panel by adjusting the glass position.

B: INSTALLATION

Install in the reverse order of removal.

NOTE:

Make sure the outer handle works properly after installation.

C: INSPECTION

1) Make sure the rod is not deformed.

2) Make sure the lever and rod work smoothly.

