

19. Key Lock Cylinder

A: REPLACEMENT

1. FRONT DOOR

- 1) Remove the door trim. <Ref. to EI-32, REMOVAL, Front Door Trim.>
- 2) Pull back the sealing cover. <Ref. to EB-13, REMOVAL, Front Sealing Cover.>
- 3) Close the front door glass completely.
- 4) Remove the rod clamp (A). Remove the lock plate (B). Replace the key cylinder.

NOTE:

Be sure to replace the lock plate (B) with a new one.

