


24.Keyless Entry Control Mod- ule

A: REMOVAL

- 1) Disconnect the ground cable from battery.
- 2) Remove the glove box. <Ref. to EI-34, REMOV-
AL, Glove Box.>
- 3) Remove the nut, and then remove the keyless
entry control module while disconnecting connec-
tor.

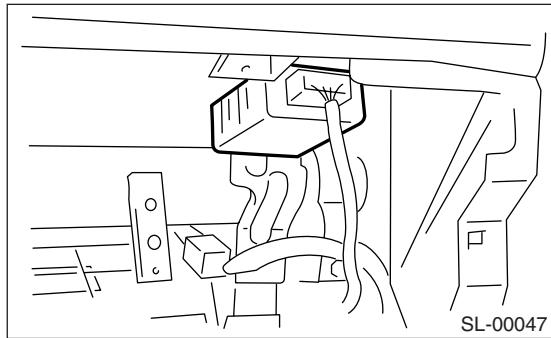

B: INSTALLATION

Install in the reverse order of removal.