

10.Rear Outer Handle

A: REMOVAL

1) Remove the rear door trim. <Ref. to EI-33, REMOVAL, Rear Door Trim.>

CAUTION:


Do not use excessive force to remove the door panel. This will deform it.

2) Remove the sealing cover. <Ref. to EB-16, REMOVAL, Rear Sealing Cover.>

3) Remove the rear inner remote. <Ref. to SL-31, REMOVAL, Rear Inner Remote.>

4) Remove the rear door latch assembly. <Ref. to SL-33, REMOVAL, Rear Door Latch Assembly.>

5) Remove two bolts, and then remove the rear outer handle.

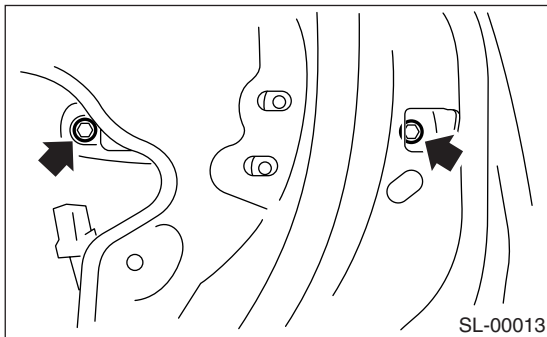

B: INSTALLATION

Install in the reverse order of removal.

NOTE:

Make sure the outer handle works properly after installation.

C: INSPECTION

1) Make sure the resinous lever is not deformed, damaged or cracked.

2) Make sure the resinous lever operates smoothly.