


COMBINATION SWITCH (WIPER)

3. Combination Switch (Wiper)

A: REMOVAL


1) Loosen the screw to remove the steering column cover.

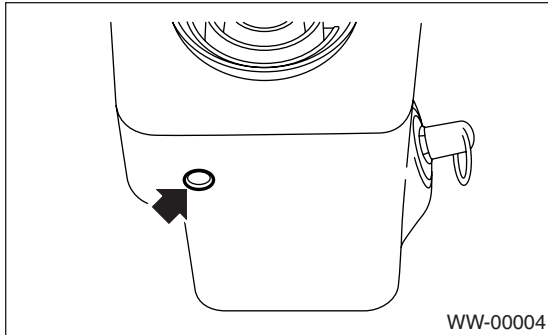

WW-00004

2) Disconnect the connectors from combination switches.

3) Loosen the screw to remove combination switch.

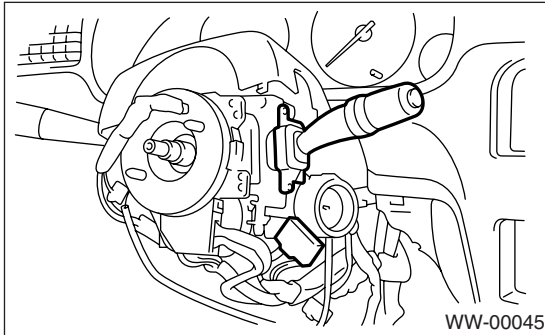


WW-00045

B: INSTALLATION

Install in the reverse order of removal.

C: INSPECTION

- Inspect the continuity between each connector terminal.

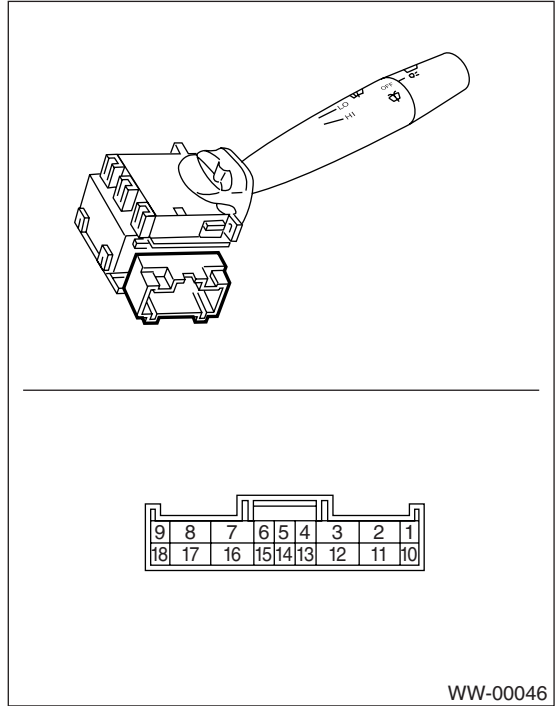

WW-00046

	Switch position	Terminal No.	Standard
FRONT	OFF	7 and 16	Less than 1 Ω
	INT	7 and 16	Less than 1 Ω
	LO	7 and 17	Less than 1 Ω
	HI	8 and 17	Less than 1 Ω
	Washer ON	2 and 11	Less than 1 Ω
REAR	Washer ON	2 and 10 10 and 12 2 and 12	Less than 1 Ω
	OFF	—	More than 1 MΩ
	INT		
	ON	2 and 10	Less than 1 Ω
	Washer ON	2 and 10 10 and 12 2 and 12	Less than 1 Ω

If continuity is not as specified, replace the switch.

COMBINATION SWITCH (WIPER)

WIPER AND WASHER SYSTEMS

- Intermittent operation inspection
 - 1) Turn the wiper switch to INT.
 - 2) Adjust the intermittent control switch to MAX.
 - 3) Apply battery voltage to switch terminals 16 and 2.
 - 4) Measure the voltage between combination switch terminal.

Terminals:

No. 7 — No. 2:

(A)	(B)
(C)	
(D)	
(E)	

WW-00053

- | | | |
|---------------------|-----------------------|---------------|
| (A) Switch position | (E) Non variable type | (I) 16±6 sec. |
| (B) Voltage | (F) 12 V | (J) 3±1 sec. |
| (C) MIN. | (G) 0 V | |
| (D) MAX. | (H) Approx. 2 sec. | |

If operation is not as specified, replace the switch.