


REAR WIPER ARM

WIPER AND WASHER SYSTEMS


9. Rear Wiper Arm

A: REMOVAL

- 1) Remove the wiper arm cover (A).

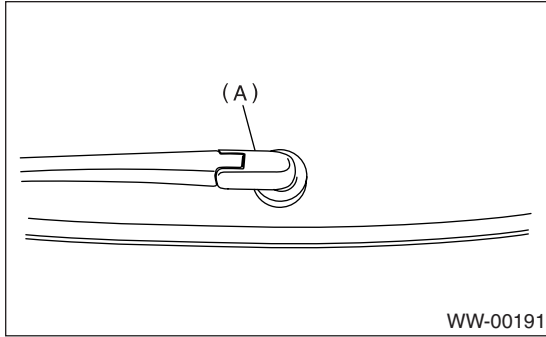


- 2) Loosen the nut to remove wiper arm.

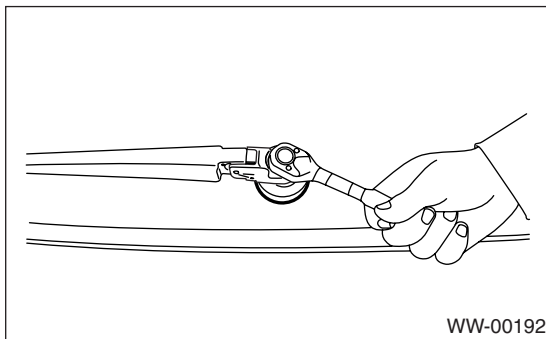

B: INSTALLATION

- 1) Install in the reverse order of removal.
- 2) Operate the rear wiper once.
- 3) Align the blade to the center of rear defogger heat wire (A).

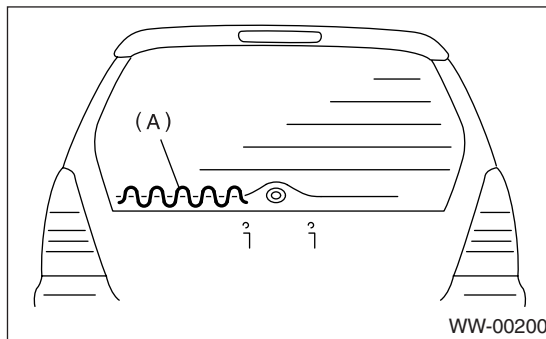

Tightening torque:

Refer to **COMPONENT** in **General Description**.

<Ref. to **WW-3, REAR WIPER, COMPONENT, General Description**.>

C: ADJUSTMENT

- 1) Operate the rear wiper once.
- 2) Align the blade to the center of rear defogger heat wire (A).

