



10. Rear Wiper Motor

A: REMOVAL

- 1) Disconnect the ground cable from battery.
- 2) Remove the rear wiper arm.
- 3) Remove the cap (A), nut (B), and spacer (C) from rear wiper shaft.

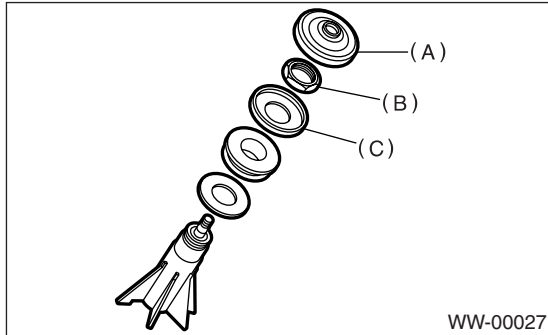


- 4) Remove the rear gate lower trim. <Ref. to EI-45, REMOVAL, Rear Gate Trim.>
- 5) Unclip the clip of harness and disconnect the connector of wiper motor.
- 6) Loosen the bolts to remove the wiper motor assembly (A).

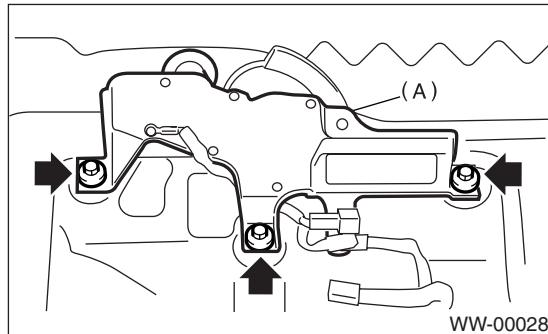

B: INSTALLATION

- 1) Install in the reverse order of removal.
- 2) Install the rear wiper cushion with the arrow mark facing up, as shown in the figure.

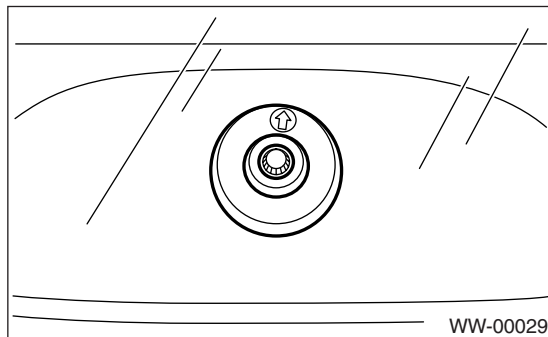


Tightening torque:

Refer to **COMPONENT** in **General Description**.


<Ref. to **WW-3, REAR WIPER, COMPONENT, General Description**.>

C: INSPECTION

- 1) Connect the battery to wiper motor connector and confirm that the wiper motor operates.

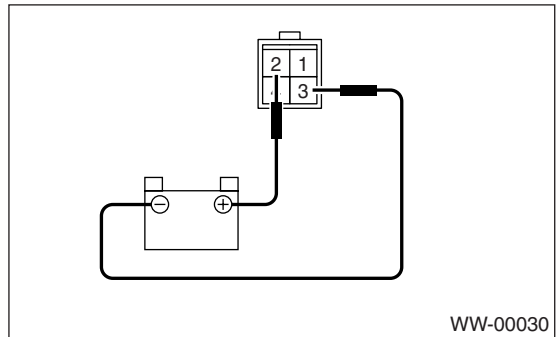

- 2) Connect the battery to terminal of connector and remove the terminal connections with motor rotated, and stop the wiper motor through operation.

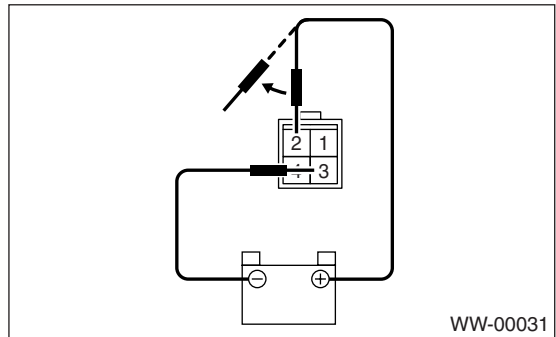

- 3) Connect the battery and confirm that the motor stops at automatic stop position after the motor operates at low speed again.

