

REAR WIRING HARNESS, BULKHEAD WIRING HARNESS, ROOF CORD AND FUEL TANK CORD

WIRING SYSTEM

52.Rear Wiring Harness, Bulkhead Wiring Harness, Roof Cord and Fuel Tank Cord

A: LOCATION

• Rear Wiring Harness

Connector				Connecting to	
No.	Pole	Color	Area	No.	Name
R1	8	★	B-2	B97	Bulkhead wiring harness
R2	12	★	B-2	B98	
R3	24	★	B-2	B99	
R4	1	★	B-3		Parking brake switch
R8	2	★	C-4		Seat belt switch
R15	16	★	B-3	R57	Fuel tank cord
R22	3	★	B-5		Rear door switch LH
R41	4	Blue	B-2		Seat heater RH
R42	4	★	B-3		Seat heater switch RH
R43	4	Blue	B-3		Seat heater switch LH
R44	4	Blue	C-3		Seat heater LH
R72	2	★	B-3		Rear ABS wheel speed sensor RH
R73	2	★	C-4		Rear ABS wheel speed sensor LH
R146	2	★	B-3		Rear accessory power supply socket

★: Non-colored

• Bulkhead Wiring Harness

Connector				Connecting to	
No.	Pole	Color	Area	No.	Name
B97	8	★	B-2	R1	Rear wiring harness
B98	12	★	B-2	R2	
B99	24	★	B-2	R3	
B266	8	★	B-2	D28	Rear door cord RH
B267	3	★	C-4		Front door switch LH
B268	3	★	B-2		Front door switch RH
B270	8	★	C-4	D22	Rear door cord LH

★: Non-colored

• Roof Cord

Connector				Connecting to	
No.	Pole	Color	Area	No.	Name
R50	6	★	B-1	B90	Bulkhead wiring harness
R52	3	★	A-3		Room light
R55	2	★	B-2		Sunroof
R56	2	★	B-3		Spot light
R139	3	★	B-2		Compass mirror

★: Non-colored

REAR WIRING HARNESS, BULKHEAD WIRING HARNESS, ROOF CORD AND FUEL TANK CORD

WIRING SYSTEM

• Fuel Tank Cord

Connector				Connecting to	
No.	Pole	Color	Area	No.	Name
R47	3	★	B-4		Fuel tank pressure sensor
R57	16	★	B-3	R15	Rear wiring harness
R58	6	★	B-3		Fuel pump
R59	2	★	B-4		Fuel sub level sensor
R68	2	★	B-4		Pressure control solenoid valve
R69	2	★	B-4		Vent control solenoid
R144	2	★	B-4		Fuel tank pressure solenoid


★: Non-colored

• Airbag Wiring Harness

Connector				Connecting to	
No.	Pole	Color	Area	No.	Name
AB7	12	Yellow	C-2		Airbag control module
AB8	12	Yellow	C-2		Airbag control module
AB9	2	Yellow	C-4		Seat airbag module LH
AB10	4	Yellow	C-5		Side sensor LH
AB11	2	Yellow	B-2		Seat airbag module RH
AB12	4	Yellow	B-2		Side sensor RH
AB19	2	Black	C-4		Pretensioner LH
AB20	2	Black	B-3		Pretensioner RH

REAR WIRING HARNESS, BULKHEAD WIRING HARNESS, ROOF CORD AND FUEL TANK CORD

WIRING SYSTEM

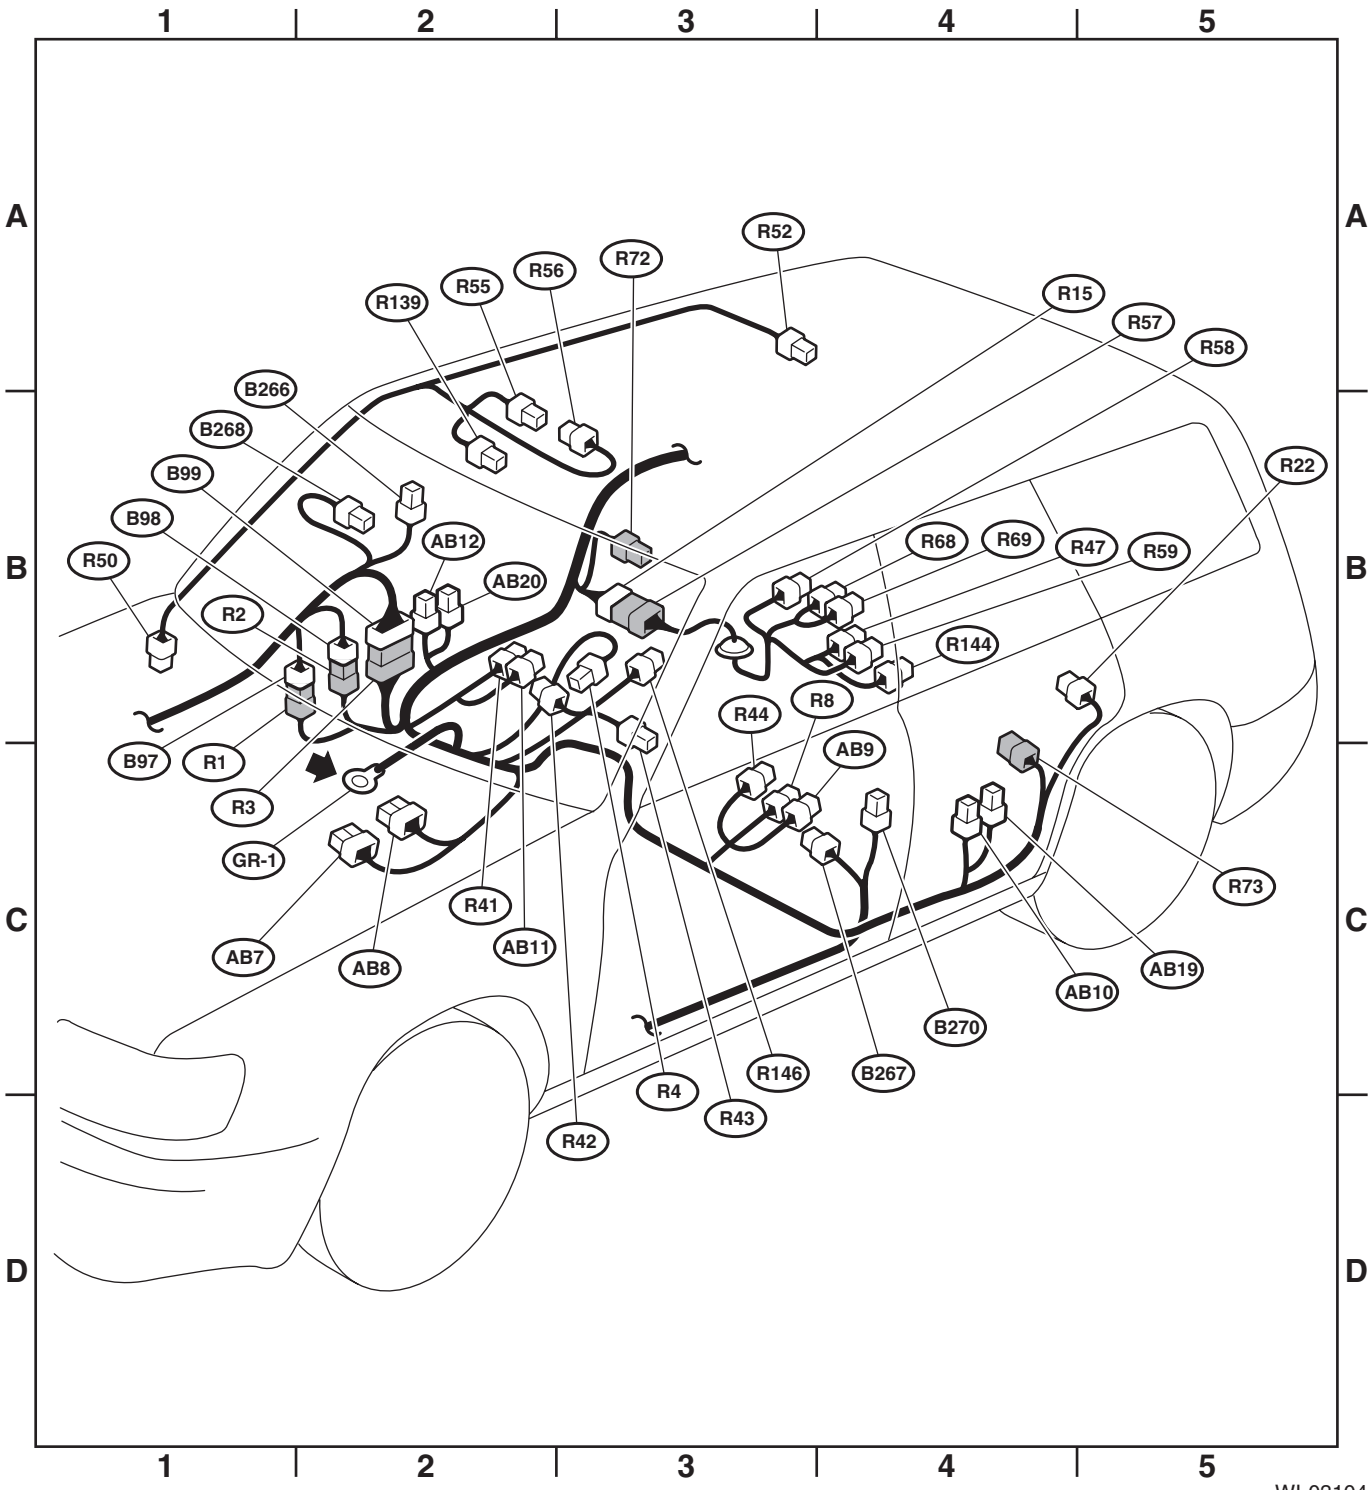

WI-03104