

# Air Vent Grille

HVAC SYSTEM (HEATER, VENTILATOR AND A/C)


---

## 22. Air Vent Grille

### A: REMOVAL


#### 1. CENTER GRILLE

- 1) Disconnect the ground cable from the battery.
- 2) Remove the center console panel. <Ref. to EI-39, REMOVAL, Instrument Panel Assembly.>
- 3) Loosen two screws to remove the center air vent grille.

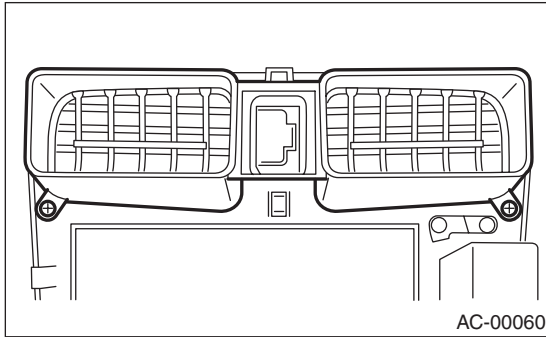

#### 2. SIDE GRILLE

Remove the side vent grill by prying four points.

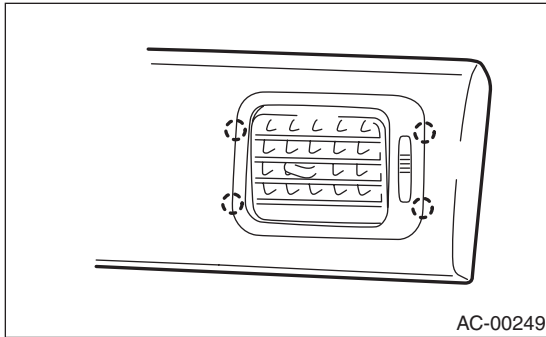

### B: INSTALLATION

Install in the reverse order of removal.

### C: INSPECTION

The direction and amount of air should be adjusted smoothly.

The adjustment should be maintained in each position.