

23.Heater Duct

A: REMOVAL

- 1) Disconnect the ground cable from the battery.
- 2) Remove the front seats. <Ref. to SE-7, REMOVAL, Front Seat.>
- 3) Remove the front side sill cover.
- 4) Turn over the floor mat and remove the cover of the part engaging the heater unit, then remove the heater duct.

B: INSTALLATION

Install in the reverse order of removal.