


## 25.A/C Filter

### A: REPLACEMENT

- 1) Disconnect the ground cable from the battery.
- 2) Remove the glove box. <Ref. to EI-36, REMOV-AL, Glove Box.>
- 3) Remove the A/C filter cover and remove the A/C filter.

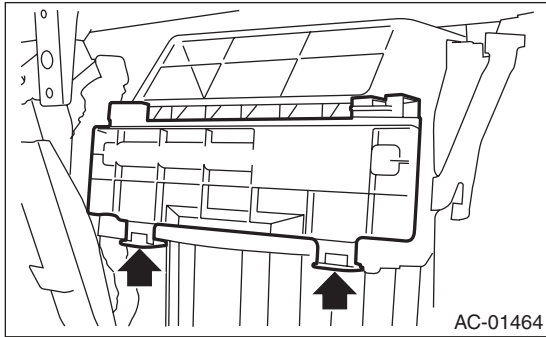

- 4) Install in the reverse order of removal.