

Basic Diagnostic Procedure

AIRBAG SYSTEM (DIAGNOSTICS)

1. Basic Diagnostic Procedure

A: PROCEDURE

| | Step | Check | Yes | No |
|---|---|------------------------------------|---|---|
| 1 | CHECK AIRBAG WARNING LIGHT. Turn the ignition switch to ON. | Does airbag warning light turn on? | Go to step 2. | <Ref. to AB(diag)-37, Airbag Warning Light Failure.>Go to "Airbag Warning Light Failure". |
| 2 | READ DTC. <Ref. to AB(diag)-29, READ DIAGNOSTIC TROUBLE CODE (DTC), OPERATION, Subaru Select Monitor.> | Is the normal code being detected? | Finish the diagnosis. | Go to step 3. |
| 3 | PERFORM DIAGNOSIS. 1) Judge the possible cause from "List of Diagnostic Trouble Code" <Ref. to AB(diag)-42, List of Diagnostic Trouble Code (DTC).> 2) Inspect the DTC using "List of Diagnostic Trouble Code (DTC)". 3) Repair the trouble cause. 4) Perform the Clear Memory Mode. <Ref. to AB(diag)-35, Clear Memory Mode.> 5) Perform the Inspection Mode. <Ref. to AB(diag)-34, Inspection Mode.> 6) Read any other DTCs displayed. | Is DTC being displayed? | Perform the procedure 1) to 5) in step 3. | Finish the diagnosis. |