

Inhibitor Switch

CRUISE CONTROL SYSTEM

6. Inhibitor Switch

A: REMOVAL


- 1) Disconnect the ground cable from the battery.
- 2) Disconnect the connector from inhibitor switch, then remove the switch. <Ref. to 4AT-48, REMOVAL, Inhibitor Switch.>

B: INSTALLATION

Install in the reverse order of removal.

C: INSPECTION

Measure the inhibitor switch resistance.

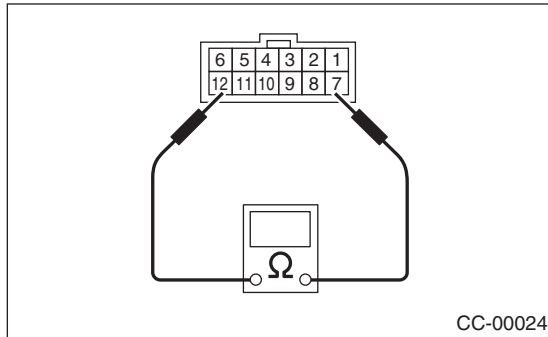

Select lever Position	Terminal No.	Standard value
P	7 and 12	Less than 1 Ω
N		Less than 1 Ω
Other than P or N		1 MΩ or more

If NG, replace the inhibitor switch.