


5. Front Sealing Cover

A: REMOVAL


- 1) Disconnect the ground cable from the battery.
- 2) Remove the front door trim. <Ref. to EI-34, REMOVAL, Front Door Trim.>
- 3) Remove the front speaker. <Ref. to ET-8, REMOVAL, Front Speaker.>
- 4) Remove the door trim bracket.

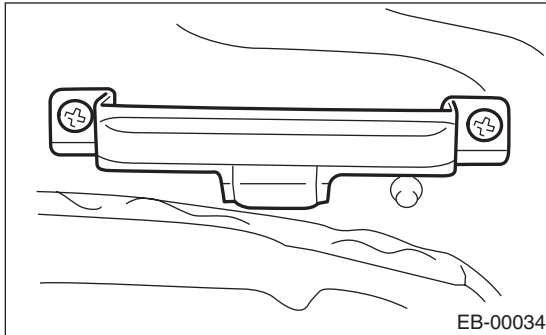

- 5) Remove the sealing cover.

NOTE:

- Carefully remove the butyl tape. Excessive force will easily break the cover.
- If cover gets broken, replace it with a new part.

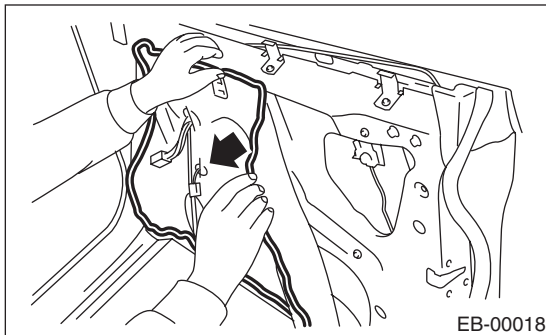

B: INSTALLATION

- 1) Install in the reverse order of removal.
- 2) When replacing the sealing cover, use the butyl tape.
- 3) Press the butyl tape-applied area firmly to prevent any floating on surface.

Butyl tape:

3M8626 or equivalent

NOTE:

- Apply a uniform bead of butyl tape.
- Attach the sealing cover, keeping it from becoming wrinkled.
- Breaks in the bead will allow water leakage and contamination.

C: INSPECTION

If the sealing cover gets damaged, replace it with a new part.