


14. Roof Rail

A: REMOVAL

- 1) Remove the roof trim. <Ref. to EI-46, REMOVAL, Roof Trim.>
- 2) Remove the five installing nuts.
- 3) Carefully remove the clip on the front end in the horizontal direction, then remove the roof rail in the upward direction.

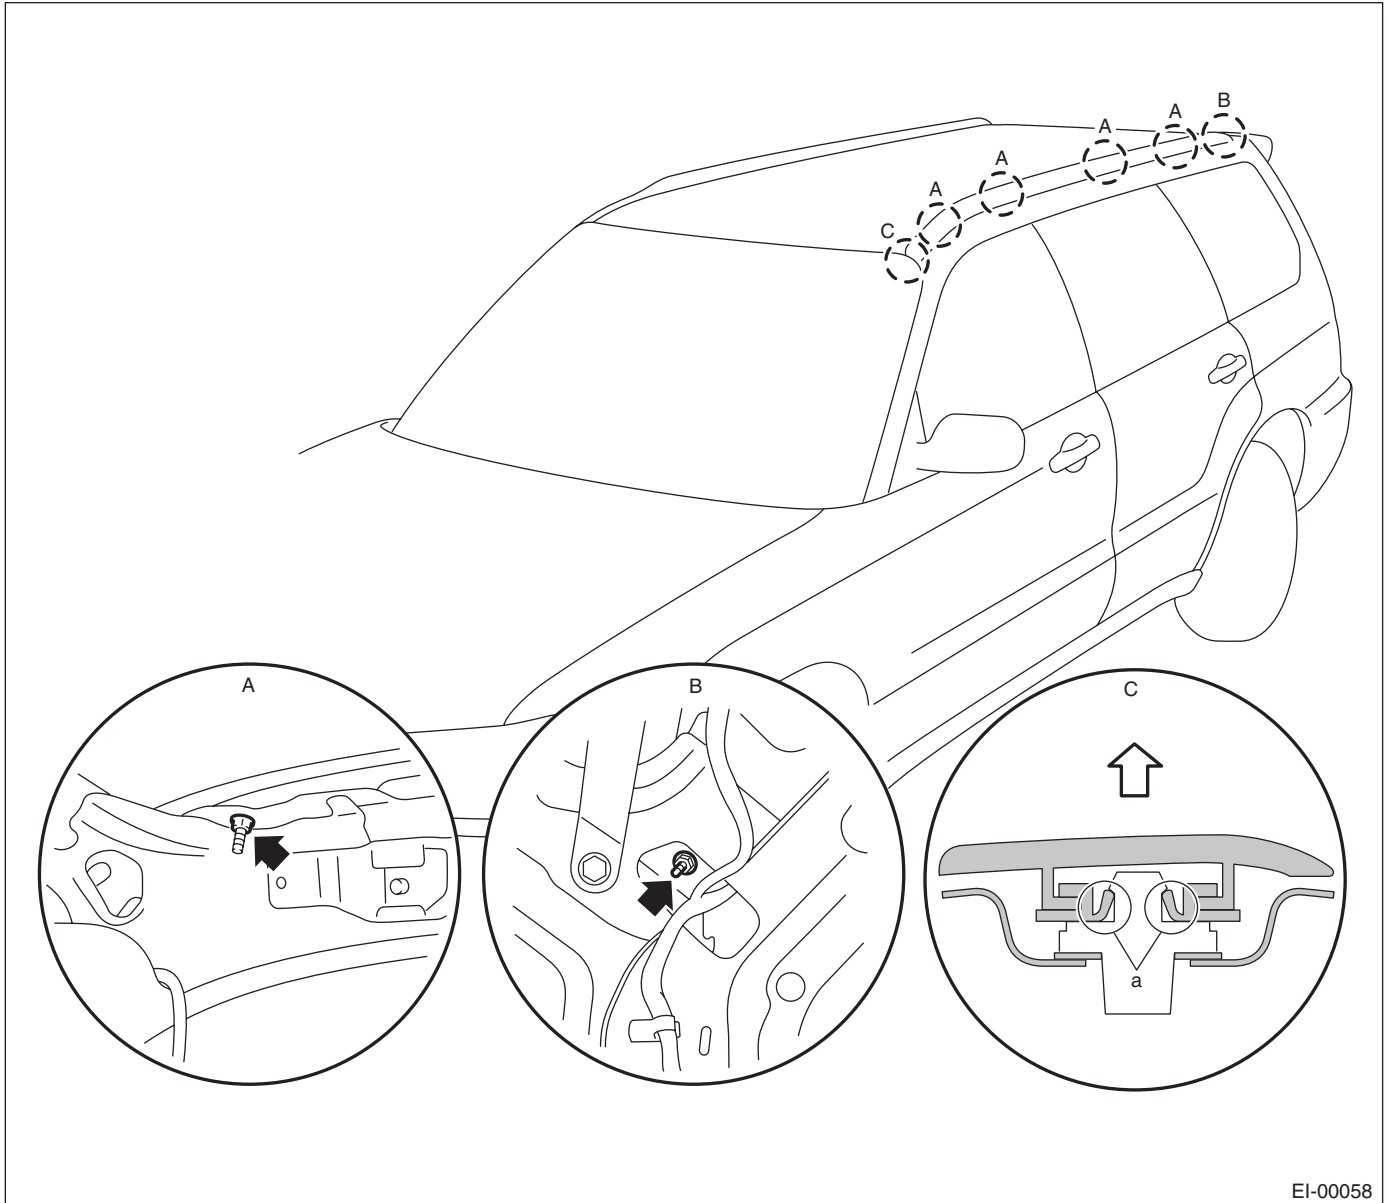

EI-00058

NOTE:

When removing the C clip, apply force to it in the horizontal direction and then remove in the upward direction while bending the a section side claw out of the way.

B: INSTALLATION

Install in the reverse order of removal.

Tightening torque:

7.5 N·m (0.76 kgf-m, 5.53 ft-lb)

CAUTION:

When removing or installing the roof rail, be careful not to scratch the body panel with the stud bolt of roof rail.