


## 26.Heat Shield Cover

### A: REMOVAL

#### 1. CENTER HEAT SHIELD COVER


Loosen four bolts to remove the center heat shield cover.

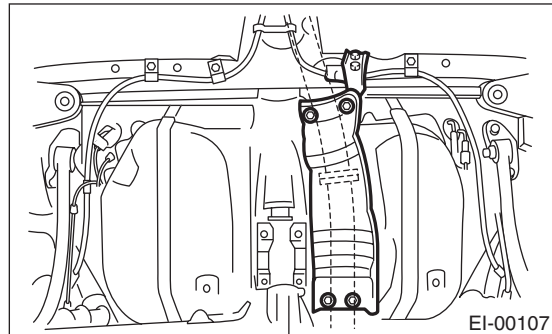

#### 2. REAR HEAT SHIELD COVER

1) Remove the muffler. <Ref. to EX (H4SO)-9, REMOVAL, Muffler.>

2) Loosen the four bolts to remove the rear heat shield cover.

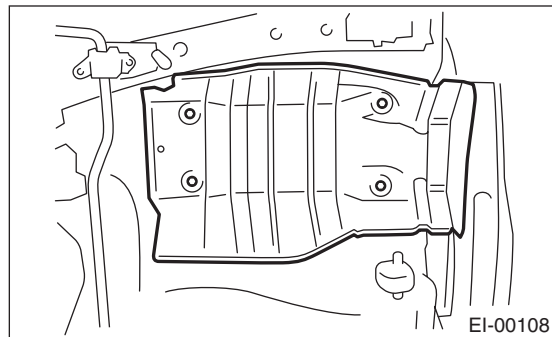

### B: INSTALLATION

Install in the reverse order of removal.

# Heat Shield Cover

EXTERIOR/INTERIOR TRIM

---