

## 5. Tachometer

### A: REMOVAL


Disassemble the combination meter, and then remove the tachometer. <Ref. to IDI-11, DISASSEMBLY, Combination Meter.>

### B: INSTALLATION

Install in the reverse order of removal.

### C: INSPECTION

Measure the tachometer resistance.

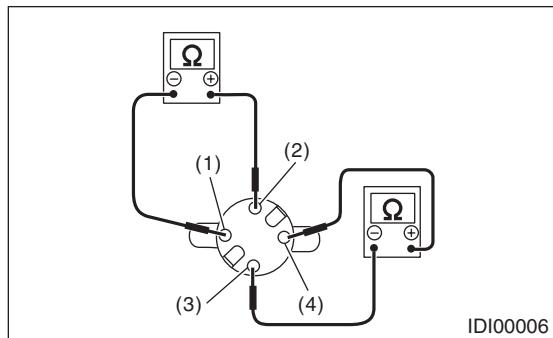

- (1) COS-
- (2) COS+
- (3) SIN-
- (4) SIN+

Terminals	Specified resistance
SIN+ and SIN- terminal	$200\pm8\ \Omega$
COS+ and COS- terminal	$200\pm8\ \Omega$

If defective, replace the tachometer.

If OK, replace the combination meter printed circuit.