


## 12. Clearance/Parking Light Bulb

### A: REMOVAL

- 1) Disconnect the ground cable from the battery.
- 2) Remove the six clips holding the upper part of bumper face and turn over the upper part of bumper face.
- 3) Turn the socket and remove the bulb.

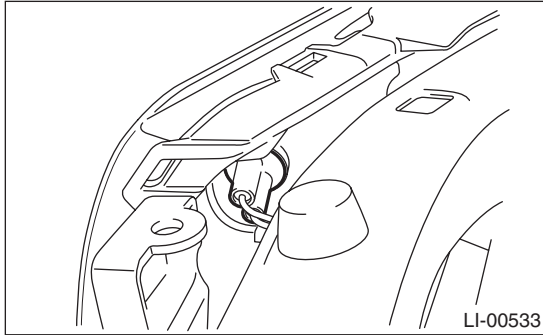

### B: INSTALLATION

Install in the reverse order of removal.

### C: INSPECTION

- 1) Visually check the bulb for blow out.
- 2) Check the bulb specification.  
<Ref. to LI-2, SPECIFICATION, General Description.>
- 3) If NG, replace the bulb with a new part.