


## 5. Front Inner Remote

### A: REMOVAL

- 1) Remove the door trim. <Ref. to EI-34, REMOVAL, Front Door Trim.>
- 2) Remove the sealing cover. <Ref. to EB-13, REMOVAL, Front Sealing Cover.>
- 3) Remove the one screw and two cables.
- 4) Remove the front inner remote.

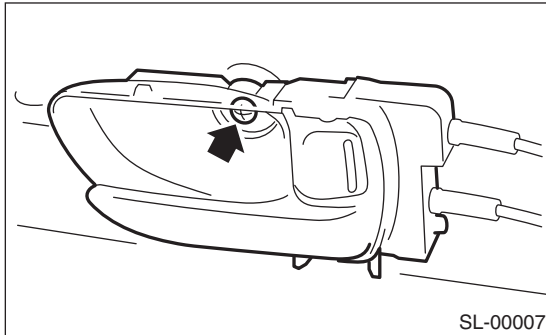

### B: INSTALLATION

Install in the reverse order of removal.

#### ***Tightening torque:***

***1.5 N·m (0.15 kgf-m, 1.1 ft-lb)***

#### **NOTE:**

Make sure the inner remote works properly after installation.

### C: INSPECTION

- 1) Make sure the cable is not deformed.
- 2) Make sure the lever and cable move smoothly.

#### **NOTE:**

If the remote handle is a chrome plated type, check that there is plenty of grease applied to the cable joint of the remote handle.

If there is not enough grease, assemble the cable after applying additional grease.