


Front Door Lock Actuator

SECURITY AND LOCKS

8. Front Door Lock Actuator

A: REMOVAL

- 1) Remove the front door latch assembly. <Ref. to SL-31, REMOVAL, Front Door Latch and Door Lock Actuator Assembly.>
- 2) Loosen two screws to remove the front door lock actuator.

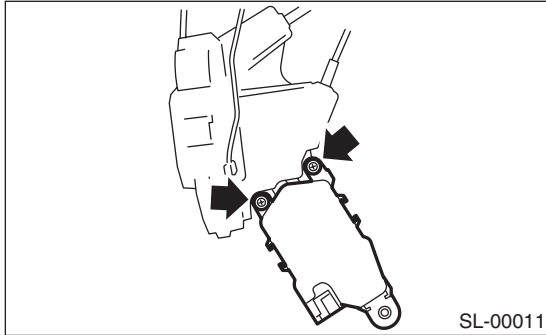

B: INSTALLATION


Install in the reverse order of removal.

NOTE:

Make sure the lock works properly after installation.

C: INSPECTION

- 1) Disconnect the door lock actuator harness connector.
- 2) Connect the battery to door lock actuator terminals.

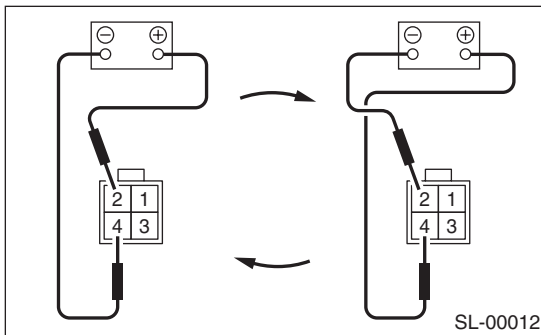

Terminal No.	Actuator operation
No. 2 (+) and No. 4 (-)	Unlock → Lock
No. 4 (+) and No. 2 (-)	Lock → Unlock

If defective, replace the door lock actuator.