

## Read Diagnostic Trouble Code (DTC)

ABS (DIAGNOSTICS)

---

### 7. Read Diagnostic Trouble Code (DTC)

#### A: OPERATION

For details about reading of DTCs, refer to “Subaru Select Monitor”. <Ref. to ABS(diag)-16, Subaru Select Monitor.>