

11. List of Diagnostic Trouble Code (DTC)

A: LIST

DTC	Content of diagnosis		Display	Reference target
21	ABS wheel speed sensor malfunction (Broken wire, short)	Front ABS wheel speed sensor RH	Front Right ABS Sensor Circuit Open or Shorted Battery	<Ref. to ABS(diag)-38, DTC 21 ABS WHEEL SPEED SENSOR MALFUNCTION FR SENSOR (BROKEN WIRE, INPUT VOLTAGE TOO HIGH), Diagnostic Procedure with Diagnostic Trouble Code (DTC).>
22	ABS wheel speed sensor malfunction (ABS wheel speed sensor abnormal signal)	Abnormal signal of front ABS wheel speed sensor RH	Front Right ABS Sensor Signal	<Ref. to ABS(diag)-43, DTC 22 FRONT ABS WHEEL SPEED SENSOR RH MALFUNCTION (ABS WHEEL SPEED SENSOR ABNORMAL SIGNAL), Diagnostic Procedure with Diagnostic Trouble Code (DTC).>
23	ABS wheel speed sensor malfunction (Broken wire, short)	Front ABS wheel speed sensor LH	Front Left ABS Sensor Circuit Open or Shorted Battery	<Ref. to ABS(diag)-38, DTC 23 ABS WHEEL SPEED SENSOR MALFUNCTION FL SENSOR (BROKEN WIRE, INPUT VOLTAGE TOO HIGH), Diagnostic Procedure with Diagnostic Trouble Code (DTC).>
24	ABS wheel speed sensor malfunction (ABS wheel speed sensor abnormal signal)	Abnormal signal of front ABS wheel speed sensor LH	Front Left ABS Sensor Signal	<Ref. to ABS(diag)-43, DTC 24 FRONT ABS WHEEL SPEED SENSOR LH MALFUNCTION (ABS WHEEL SPEED SENSOR ABNORMAL SIGNAL), Diagnostic Procedure with Diagnostic Trouble Code (DTC).>
25	ABS wheel speed sensor malfunction (Broken wire, short)	Rear ABS wheel speed sensor RH	Rear Right ABS Sensor Circuit Open or Shorted Battery	<Ref. to ABS(diag)-38, DTC 25 ABS WHEEL SPEED SENSOR MALFUNCTION RR SENSOR (BROKEN WIRE, INPUT VOLTAGE TOO HIGH), Diagnostic Procedure with Diagnostic Trouble Code (DTC).>
26	ABS wheel speed sensor malfunction (ABS wheel speed sensor abnormal signal)	Abnormal signal of rear ABS wheel speed sensor RH	Rear Right ABS Sensor Signal	<Ref. to ABS(diag)-43, DTC 26 REAR ABS WHEEL SPEED SENSOR RH MALFUNCTION (ABS WHEEL SPEED SENSOR ABNORMAL SIGNAL), Diagnostic Procedure with Diagnostic Trouble Code (DTC).>
27	ABS wheel speed sensor malfunction (Broken wire, short)	Rear ABS wheel speed sensor LH	Rear Left ABS Sensor Circuit Open or Shorted Battery	<Ref. to ABS(diag)-39, DTC 27 ABS WHEEL SPEED SENSOR MALFUNCTION RL SENSOR (BROKEN WIRE, INPUT VOLTAGE TOO HIGH), Diagnostic Procedure with Diagnostic Trouble Code (DTC).>
28	ABS wheel speed sensor malfunction (ABS wheel speed sensor abnormal signal)	Abnormal signal of rear ABS wheel speed sensor LH	Rear Left ABS Sensor Signal	<Ref. to ABS(diag)-44, DTC 28 REAR ABS WHEEL SPEED SENSOR LH MALFUNCTION (ABS WHEEL SPEED SENSOR ABNORMAL SIGNAL), Diagnostic Procedure with Diagnostic Trouble Code (DTC).>
29		Abnormal ABS wheel speed sensor on any one of four sensors	Any One of Four ABS Sensors Signal	<Ref. to ABS(diag)-48, DTC 29 ABS WHEEL SPEED SENSOR SIGNAL MALFUNCTION IN ONE OF FOUR WHEELS, Diagnostic Procedure with Diagnostic Trouble Code (DTC).>
31	Inlet valve malfunction in hydraulic unit	Front inlet valve RH	FR Hold Valve malfunction	<Ref. to ABS(diag)-51, DTC 31 FRONT INLET SOLENOID VALVE RH MALFUNCTION IN ABS CONTROL MODULE AND HYDRAULIC CONTROL UNIT (ABSCM&H/U), Diagnostic Procedure with Diagnostic Trouble Code (DTC).>

List of Diagnostic Trouble Code (DTC)

ABS (DIAGNOSTICS)

DTC	Content of diagnosis		Display	Reference target
32	Outlet valve malfunction in hydraulic unit	Front outlet valve RH	FR Pressure Reducing Valve malfunction	<Ref. to ABS(diag)-51, DTC 32 FRONT OUTLET SOLENOID VALVE RH MALFUNCTION IN ABS CONTROL MODULE AND HYDRAULIC CONTROL UNIT (ABSCM&H/U), Diagnostic Procedure with Diagnostic Trouble Code (DTC).>
33	Inlet valve malfunction in hydraulic unit	Front inlet valve LH	FL Hold Valve malfunction	<Ref. to ABS(diag)-51, DTC 33 FRONT INLET SOLENOID VALVE LH MALFUNCTION IN ABS CONTROL MODULE AND HYDRAULIC CONTROL UNIT (ABSCM&H/U), Diagnostic Procedure with Diagnostic Trouble Code (DTC).>
34	Outlet valve malfunction in hydraulic unit	Front outlet valve LH	FL Pressure Reducing Valve malfunction	<Ref. to ABS(diag)-51, DTC 34 FRONT OUTLET SOLENOID VALVE LH MALFUNCTION IN ABS CONTROL MODULE AND HYDRAULIC CONTROL UNIT (ABSCM&H/U), Diagnostic Procedure with Diagnostic Trouble Code (DTC).>
35	Inlet valve malfunction in hydraulic unit	Rear inlet valve RH	RR Hold Valve malfunction	<Ref. to ABS(diag)-51, DTC 35 REAR INLET SOLENOID VALVE RH MALFUNCTION IN ABS CONTROL MODULE AND HYDRAULIC CONTROL UNIT (ABSCM&H/U), Diagnostic Procedure with Diagnostic Trouble Code (DTC).>
36	Outlet valve malfunction in hydraulic unit	Rear outlet valve RH	RR Pressure Reducing Valve malfunction	<Ref. to ABS(diag)-51, DTC 36 REAR OUTLET SOLENOID VALVE RH MALFUNCTION IN ABS CONTROL MODULE AND HYDRAULIC CONTROL UNIT (ABSCM&H/U), Diagnostic Procedure with Diagnostic Trouble Code (DTC).>
37	Inlet valve malfunction in hydraulic unit	Rear inlet valve LH	RL Hold Valve malfunction	<Ref. to ABS(diag)-51, DTC 37 REAR INLET SOLENOID VALVE LH MALFUNCTION IN ABS CONTROL MODULE AND HYDRAULIC CONTROL UNIT (ABSCM&H/U), Diagnostic Procedure with Diagnostic Trouble Code (DTC).>
38	Outlet valve malfunction in hydraulic unit	Rear outlet valve LH	RL Pressure Reducing Valve malfunction	<Ref. to ABS(diag)-52, DTC 38 REAR OUTLET SOLENOID VALVE LH MALFUNCTION IN ABS CONTROL MODULE AND HYDRAULIC CONTROL UNIT (ABSCM&H/U), Diagnostic Procedure with Diagnostic Trouble Code (DTC).>
41	ABS control module malfunction		ECM	<Ref. to ABS(diag)-54, DTC 41 ABS CONTROL MODULE MALFUNCTION, Diagnostic Procedure with Diagnostic Trouble Code (DTC).>
42	Power voltage malfunction		Power Supply Voltage Failure	<Ref. to ABS(diag)-56, DTC 42 POWER VOLTAGE MALFUNCTION, Diagnostic Procedure with Diagnostic Trouble Code (DTC).>
47	Defective CAN communication line		CAN communication link	<Ref. to ABS(diag)-58, DTC 47 IMPROPER CAN COMMUNICATION, Diagnostic Procedure with Diagnostic Trouble Code (DTC).>
51	Defective valve relay		Valve Relay	<Ref. to ABS(diag)-60, DTC 51 VALVE RELAY MALFUNCTION, Diagnostic Procedure with Diagnostic Trouble Code (DTC).>

List of Diagnostic Trouble Code (DTC)

ABS (DIAGNOSTICS)

DTC	Content of diagnosis	Display	Reference target
52	Motor/motor relay on failure	Motor and Motor Relay	<Ref. to ABS(diag)-62, DTC 52 MOTOR/MOTOR RELAY MALFUNCTION, Diagnostic Procedure with Diagnostic Trouble Code (DTC).>
54	Stop light switch circuit malfunction	Brake Light Switch	<Ref. to ABS(diag)-64, DTC 54 FAULTY STOP LIGHT SWITCH, Diagnostic Procedure with Diagnostic Trouble Code (DTC).>
56	Faulty G sensor output voltage or output signal error	G Sensor Failure	<Ref. to ABS(diag)-66, DTC 56 G SENSOR OUTPUT VOLTAGE MALFUNCTION, Diagnostic Procedure with Diagnostic Trouble Code (DTC).>