

6. Front Tone Wheel

A: REMOVAL

The front tone wheel is integrated with the front drive shaft. Refer to the section on Front Drive Shaft.

<Ref. to DS-29, REMOVAL, Front Drive Shaft.>

B: INSTALLATION

The front tone wheel is integrated with the front drive shaft. Refer to the section on Front Drive Shaft

<Ref. to DS-30, INSTALLATION, Front Drive Shaft.>

C: INSPECTION

Visually check the tone wheel's teeth (44 pieces) for cracks or dents. If necessary, replace with a new tone wheel.

NOTE:

Replace the AC assembly with a new part if there is any defect found on the tone wheel, since it is unitized with the AC assembly of the drive shaft.