

7. Rear Tone Wheel

A: REMOVAL

The rear tone wheel is attached to the rear hub. Refer to Rear Axle.

<Ref. to DS-21, REMOVAL, Rear Axle.>

B: INSTALLATION

The rear tone wheel is attached to the rear hub. Refer to Rear Axle.

<Ref. to DS-24, INSTALLATION, Rear Axle.>

C: INSPECTION

Visually check the tone wheel's teeth (44 pieces) for cracks or dents. If necessary, replace with a new tone wheel.