

16.Brake Pipe

A: REMOVAL

NOTE:

Airbag system wiring harness is routed near the center brake pipe.

CAUTION:

- All airbag system wiring harness and connectors are colored yellow. Do not use the electrical test equipment on these circuits.
- Be careful not to damage the airbag system wiring harness when servicing the center brake pipe.
- When removing brake pipes, use a brake pipe wrench.
- When removing the brake pipe, do not bend.

B: INSTALLATION

NOTE:

Airbag system wiring harness is routed near the center brake pipe.

CAUTION:

- All airbag system wiring harness and connectors are colored yellow. Do not use the electrical test equipment on these circuits.
- Be careful not to damage the airbag system wiring harness when servicing the center brake pipe.
- When installing brake pipes, use a brake pipe wrench.
- When installing the brake pipe, do not bend.
- After installing the brake pipe and hose, bleed air.
- After installing the brake hoses, make sure that they do not contact the tires or suspension assembly, etc.

Brake pipe tightening torque:
15 N·m (1.5 kgf-m, 10.8 ft-lb)

C: INSPECTION

Ensure there are no cracks, breakage, or damage on pipes. Check the joint for fluid leakage. If any cracks, breakage, damage or leakage is found, repair or replace the pipe.

NOTE:

Check the part, which is difficult to see such as the backside using a mirror.