

## 11.Rear Tone Wheel

### **A: REMOVAL**

Remove the bolt to remove the hub from the tone wheel.

<Ref. to DS-21, REMOVAL, Rear Axle.>

### **B: INSTALLATION**

Remove any dirt on the contact surface of the hub and tone wheel, then install the tone wheel to the hub using the bolts.

<Ref. to DS-24, INSTALLATION, Rear Axle.>

### **C: INSPECTION**

Visually check the tone wheel's teeth (44 pieces) for cracks or dents. If necessary, replace with a new tone wheel.